


Owner's Manual And Assembly Instructions

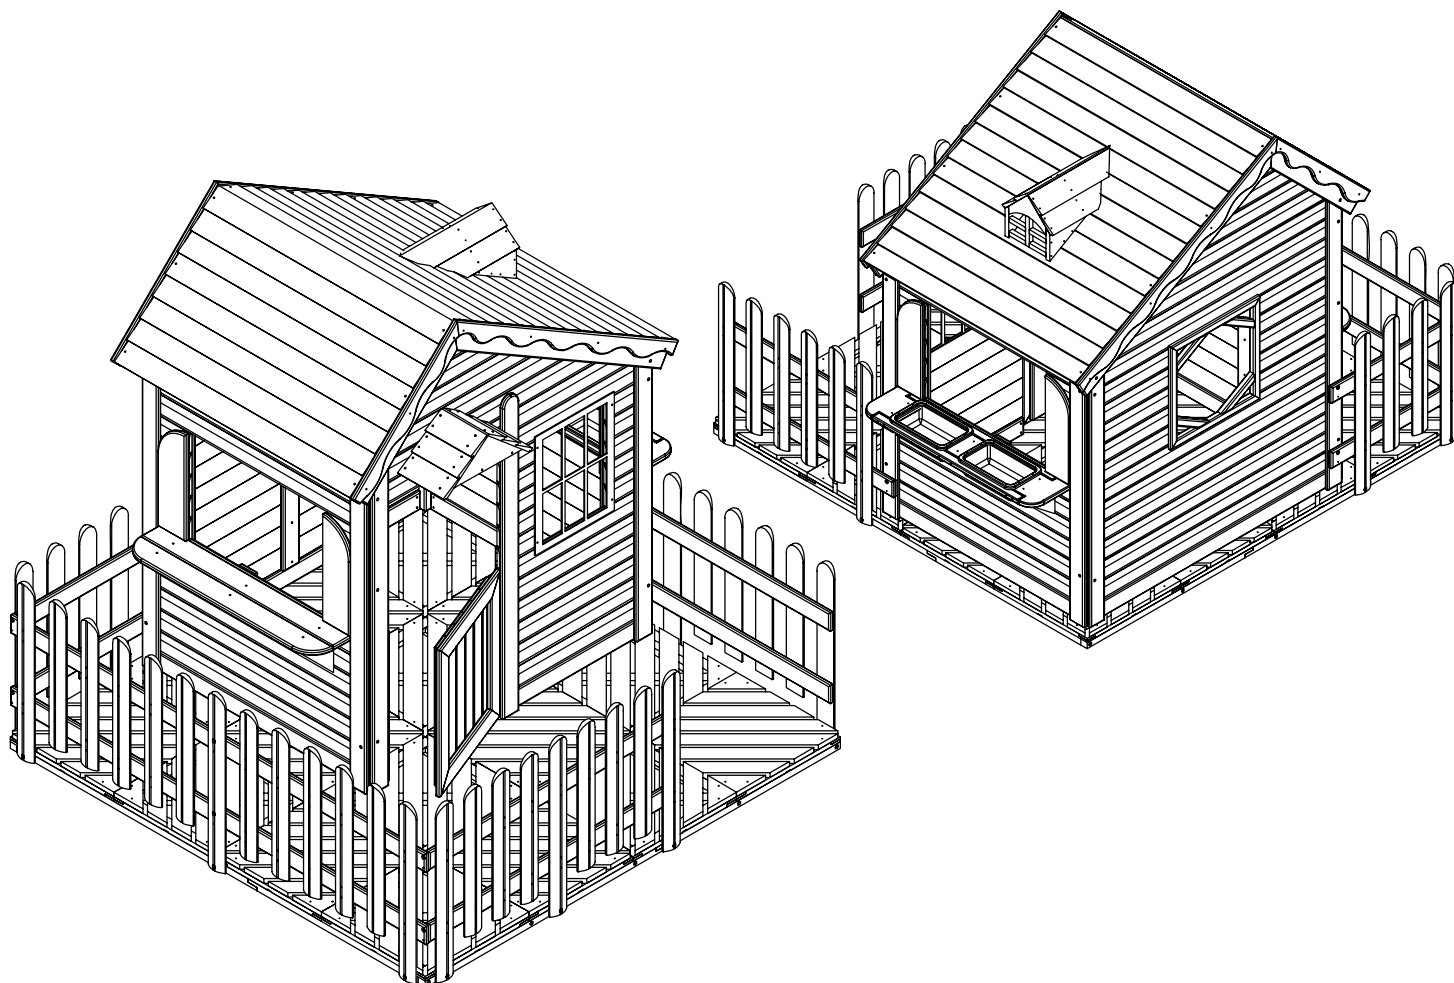

Mayfield Cottage

Model: 9200



Fit N' Fun is a product line of Creative Cedar Designs





Fit N' Fun

Thank you for purchasing a
Fit N' Fun
Playcenter. We hope it will
bring you and your children
many years of safe and
enjoyable backyard fun.

Table of Contents

Letter to Customer	2
Positioning Your Playcenter	3
Tools Required for Assembly	3
Helpful Installation Hints	4
Operating Instructions	5
Maintenance Instructions	6
Disposal Instructions	6
CPSC Information Sheet	7
Assembly Instructions	9
Limited Warranty	43
Warranty Claim Procedure	44
Customer Registration Card	45

Your owner's manual should be read carefully
before starting assembly.



STOP...PLEASE READ!!

IF YOU HAVE ANY QUESTIONS OR ARE MISSING A PART, PLEASE DO NOT CONTACT THE RETAILER THAT YOU PURCHASED THIS PRODUCT FROM. PLEASE EMAIL custservice@creativecedardesigns.com

OR CONTACT US DIRECTLY

AT OUR OFFICES, 1-888-363-4967.

OUR TRAINED STAFF WILL ANSWER YOUR QUESTIONS AND / OR EXPEDITE PARTS THAT YOU MAY NEED.

For the most efficient service, please log onto our websites at

<http://www.creativecedardesigns.com>

and register your unit as well as make an order for any missing or damaged parts.

For all international customers, please visit the following website for information on all warranty issues including where to obtain replacement parts.

<http://www.creativecedardesigns.com>

Dear Customer:

Thank you for purchasing a Fit N' Fun Playcenter. We hope it will bring you and your children many years of safe and enjoyable fun. Fit N' Fun equipment is recommended for use by **children 3 to 10 years of age**. Fit N' Fun structures are **not intended for public use**. **Fit N' Fun does not warranty any of its residential structures subjected to commercial use.**



WARNING: This Symbol points out important safety instructions which, if not followed, could endanger the personal safety of yourself and your children and/or damage your property. You **MUST** read and follow all instructions in this manual before attempting to use this playcenter.



WARNING: Children must **NOT** use this playcenter until unit has been completely assembled and inspected by an adult to insure set has been properly installed.

Please follow all recommendations below. **Failure to do so may result in the warranty being void and/or safety violations that could result in serious injury.** The following information has been provided to help you in your installation, continued satisfaction, and safe operation of your Fit N' Fun purchase.

Always keep the safety of your children in mind as your play structure is being built and as your children play on the set. Before your children play on the set please review the Operation Instructions with them to help ensure their safety.

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THEM IN A SAFE PLACE WHERE YOU CAN REFER TO THEM AS NEEDED. IN ORDER TO PROVIDE YOU WITH THE MOST EFFICIENT SERVICE, IT IS REQUIRED THAT YOU PROVIDE US WITH THE PART NUMBERS WHEN ORDERING PARTS.

Please do **NOT** return the playcenter to the retailer from which it was purchased, without first contacting Customer Service.

General Information:

Please take time and fill out the information below. This information will be needed for warranty issues.

Date of Purchase: _____ **Date stamped on box:** _____

Manufacturer: Creative Cedar Designs **Vendor:** _____
PO Box 40225 _____
Glen Oaks, New York 11004 _____

E-mail: custservice@creativecedardesigns.com

Website: <http://www.creativecedardesigns.com>

Unit Type:

Unit Name: Mayfield Cottage

Revision Date: 1/19/2010

Unit Model Number: 9200

 
The instructions and owner's manual for your new Playcenter should be read in its entirety before assembly, to minimize problems and safety issues. We recommend reading the owner's manual thoroughly after you have identified all of the parts for your Playcenter as discussed in the Helpful Installations Hints section below.

Positioning Your Play center


1. The Playcenter is designed to be installed on a level surface **by an Adult with an Adult helper**. Try to place in a flat area of your yard to minimize ground preparation.
2. Create a site free of obstacles that could cause injuries – such as low overhanging branches, overhead wires, tree stumps and/or roots, large rocks, bricks, and concrete.
3. Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over.
4. It is a good idea to place your Playcenter in an area that is convenient for adults to watch children at play.
5. The area that you choose should be policed for glass, rocks or anything jagged or sharp that could endanger your children's safety. The surface underneath your play system can cause or prevent injuries. We have additional suggestions in the Suggested Playground Surfacing Section.
6. Do not build your playset on top of surfacing material.

Tools Required for Installation:

(These are the tools that are generally required for assembly of our playsets. These tools are not included in the playset purchase.)



(Tape Measure)

 

(Level 24")



(Claw Hammer)



(3/8" Cordless Drill)



 
(Drill attachments: Phillips head screw)



(RubberMallet –Optional)



(An Adult w/an Adult helper)



(Phillips & Straight Blade screw drivers)

Helpful Installation Hints

1. Depending on your experience, assembly of this Play set should take approximately 3 to 4 hours after inventory of parts. Therefore, we recommend you set aside a full day for assembly.
2. Identify all of the parts for your Playcenter. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
3. After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
4. Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass. This will save time and familiarize you with all the different pieces in the hardware bag.
5. Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.
6. After steps 1 thru 4 have been completed, read all the way through the instructions completely. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
7. Pay close attention to the diameter and length of each bolt and screw. There will be different sizes in the same bag, so they must be sorted correctly.
8. Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
9. After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls will be out of square.
10. After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons. Check all bolt connections every two weeks.
11. Place the set on level ground.

READ! VERY IMPORTANT!

If you are missing parts or have questions regarding the installation of our quality product PLEASE email or contact us directly. Our trained staff will be happy to assist you. Please do not return the product to the retail store.

Customer service hours:

Monday thru Friday 9am to 5pm

Saturday 9am to 2pm (During Season)

Eastern Standard Time.

E-mail: custservice@creativecedardesigns.com

Ph:1-888-363-4967

Operating Instructions:



NOTE: Your children's safety is our #1 concern. Observing the following statements and warnings reduces the likelihood of serious or fatal injury. Please review these safety rules regularly with your children.

1. This Playcenter is designed for the use of 4 occupants.
2. On-site adult supervision is **required**.
3. Instruct children **not** to use the equipment in a manner other than intended.
4. The parents should have the children **dress appropriately** with well-fitting shoes. Loose clothing such as scarves and ponchos should not be worn. Always take off, tie up or tuck in cords and drawstrings on children's clothing. These things can get caught on playground equipment and strangle a child.
5. Instruct children to **never** crawl on top of a fort roof.
6. Instruct children **not** to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chain as they may cause a strangulation hazard.
7. Do not allow children to crawl through window openings.
8. Children should not sit on shelves.

Maintenance Instructions:

1. Check all nuts and bolts twice monthly during the usage season and tighten as required. (But not so tight that you crack the wood) It is particularly important that this procedure be followed at the beginning of each season.
2. Inspect wood parts monthly. The grain of the wood sometimes will lift in the dry season causing splinters to appear. Light sanding may be necessary to maintain a safe playing environment. If you are treating your Playcenter with stain regularly, it will help prevent severe checking/splitting and other weather damage.
3. We have applied a waterborne transparent stain to your unit. This is done for color only. Once or twice a year, depending on your climate conditions, you must apply some type of protection (sealant) to the wood of your unit. Prior to the application of sealant, lightly sand any "rough" spots on your set. Please note this is a requirement of your warranty.
4. Creating and maintaining the Playcenter on a level location is very important. As your children play, your Playcenter will slowly dig its way into the soil, and it is very important that it settles evenly. Make sure the play set is level and true once each year or at the beginning of each play season.

Disposal Instructions:

When the Playcenter use is no longer desired, it should be disassembled and disposed of in such a way that no unreasonable hazards will exist at the time the unit is discarded.

APPENDIX A

Information on Playground Surfacing Materials:

The following information is from the *United States Consumer Product Safety Commission's Information Sheet for playground surfacing material*. Also see the following website for additional information: www.cpsc.gov/cpscpub/pubs/323.html.

X3. CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS¹¹

X3.1 The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment-related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable it may quickly turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around playground equipment.

X3.2 Table X3.1 lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto four different loose-fill surfacing materials if they are installed and maintained at depths of 6, 9, and 12 in. However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used.

X3.3 It is recommended that a shock absorbing material should extend a minimum of 6 ft in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

X3.4 This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area, and its cost.

¹¹This information has been extracted from the CPSC publications "Playground Surfacing — Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to: Office of Public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C., 20207 or call the toll-free hotline: 1-800-638-2772.


The American Society for Testing and Materials takes no position respecting the validity of any patent right asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

The standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either approved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards. 100 Barr Harbor Drive, West Conshohocken, PA 19428.

[illegible]

Mayfield Cottage

Assembly Instructions

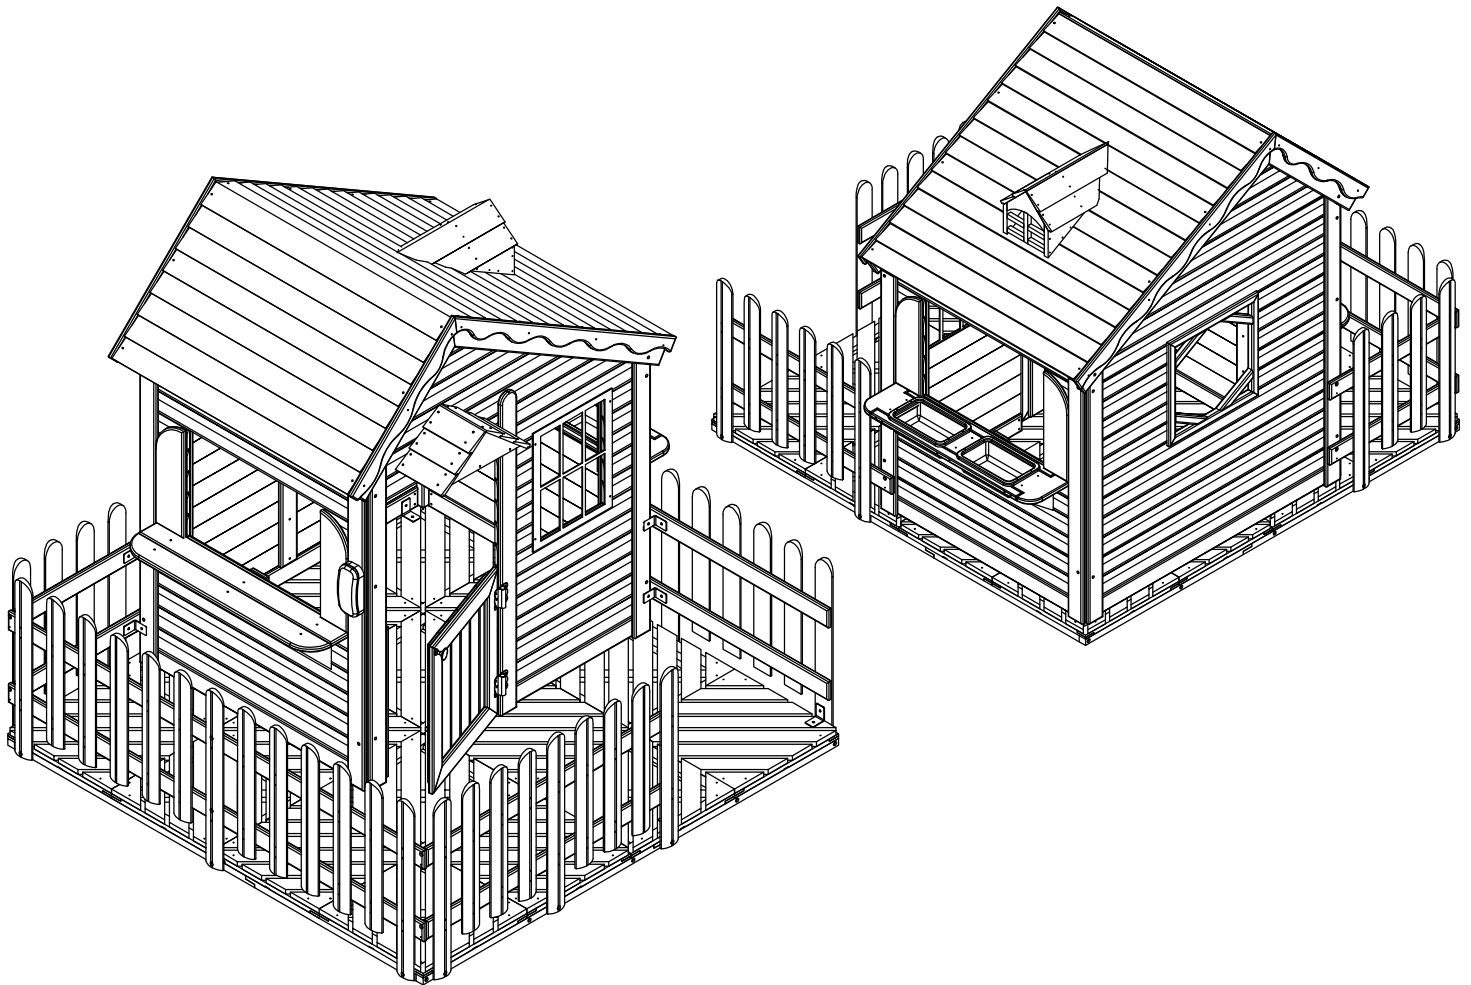

WARNING: CHOKING HAZARD

Unassembled parts may be a choking hazard to children 3 years and younger



CAUTION: Adult Assembly Required.


Hardware contains small pieces with sharp points. Keep parts out of the reach of children until assembled. Parts of this product can present dangers if improperly assembled.



CAUTION: The plastic bags that contain the hardware may present a choking hazard to small children. Please keep these bags and all plastic bags out of the reach of children. Do not allow children to play with them and dispose of them immediately when empty.


















Basic Setup Dimensions

Place the set on level ground, not less than 6ft [2 M] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
























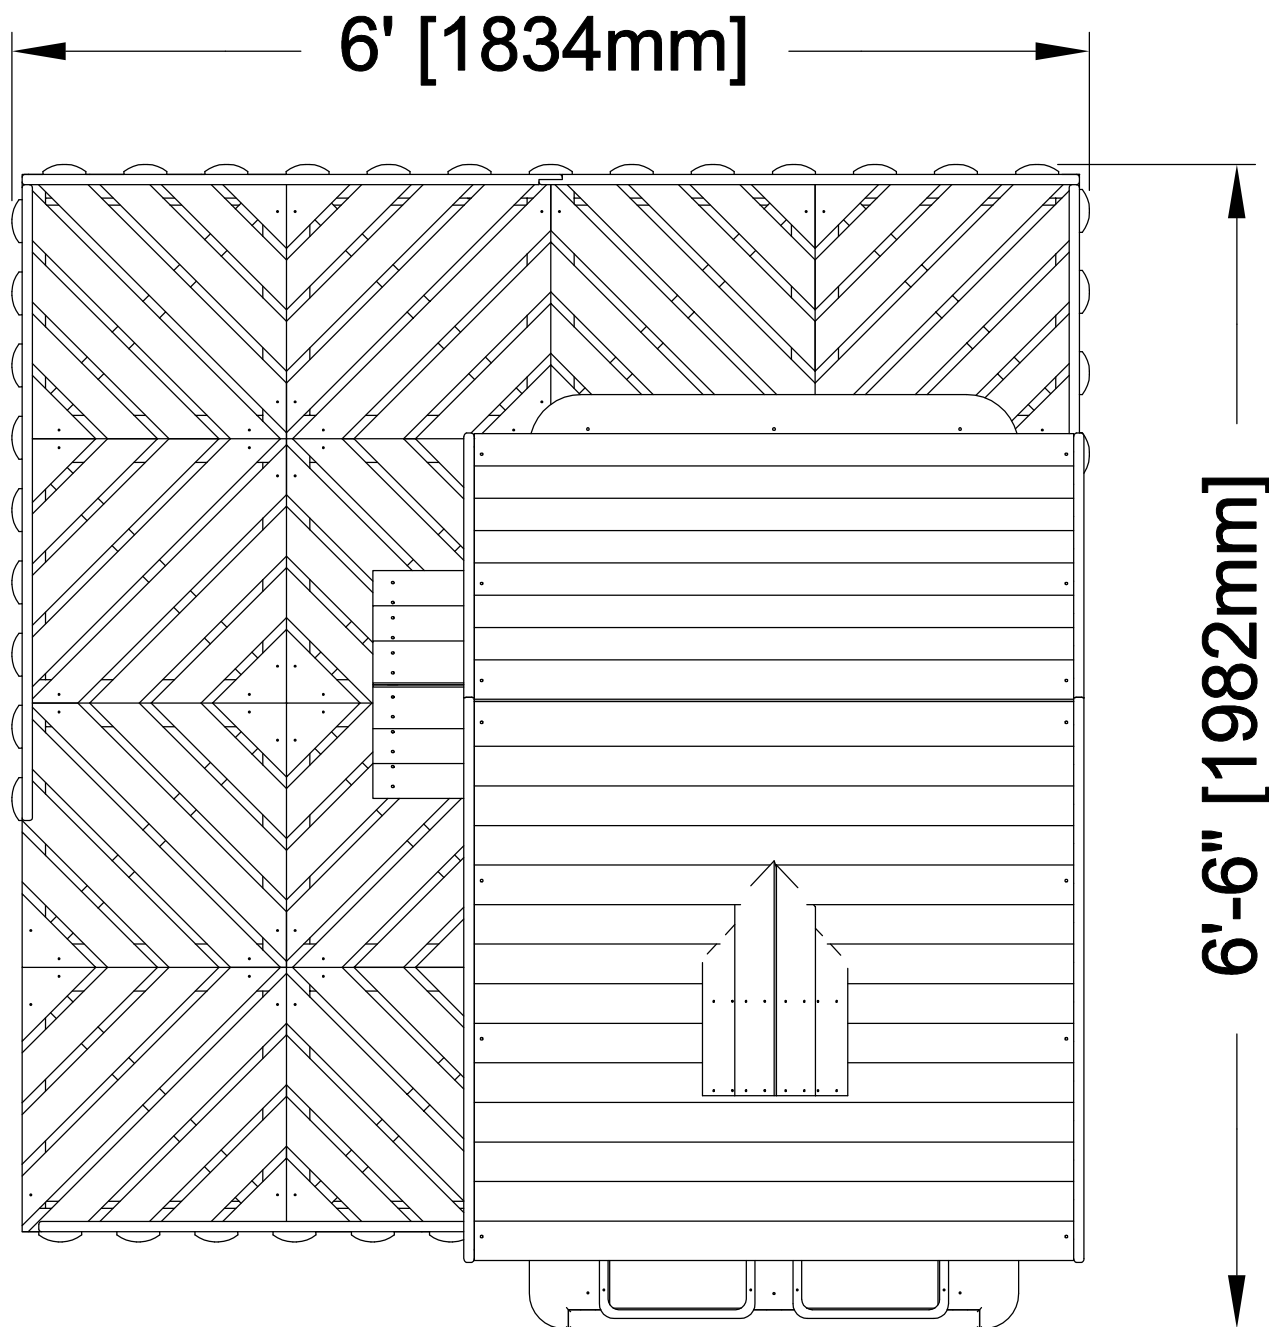


HEIGHT = 5'-6" [1684mm]





























Parts Identification

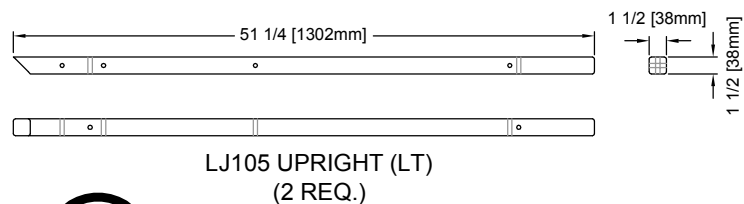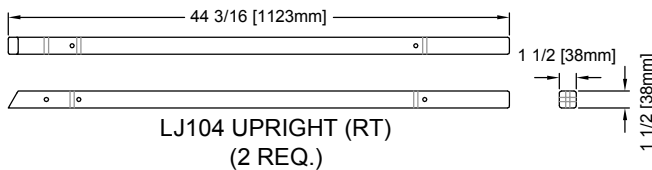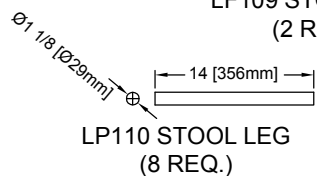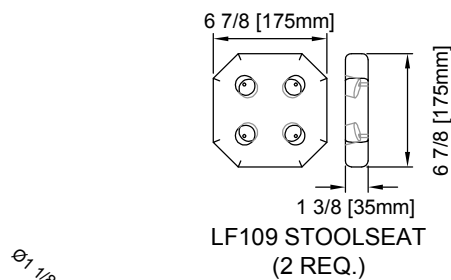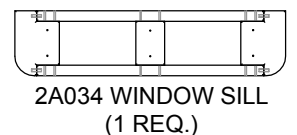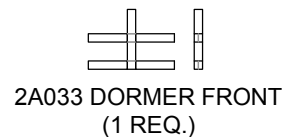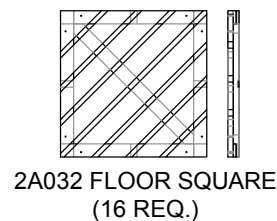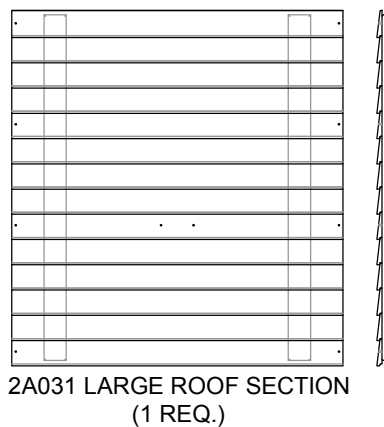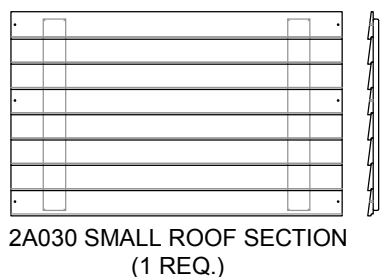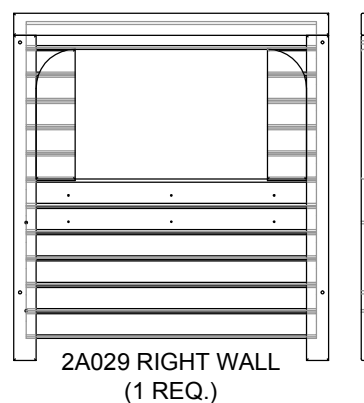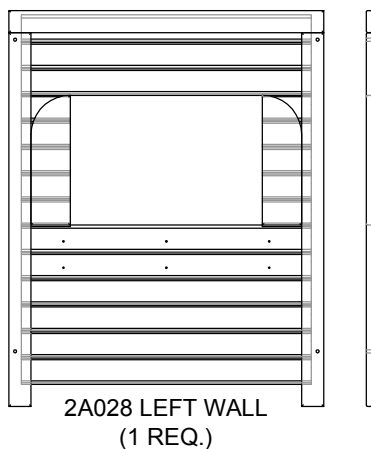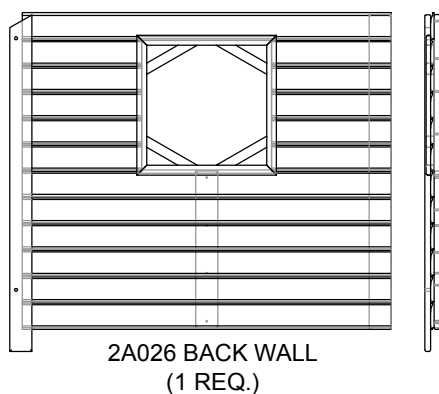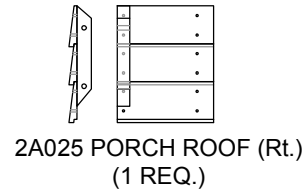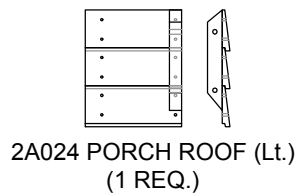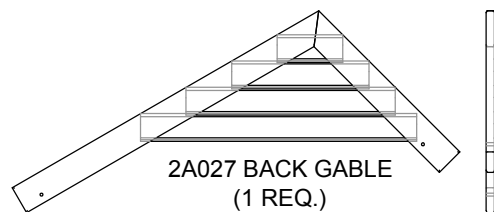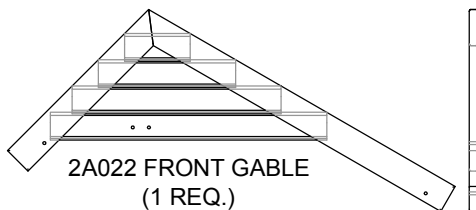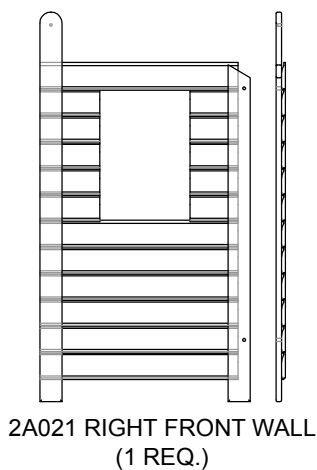

Parts Identification

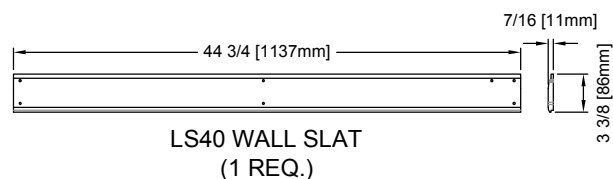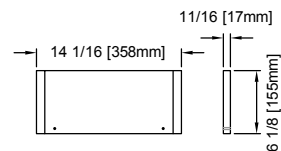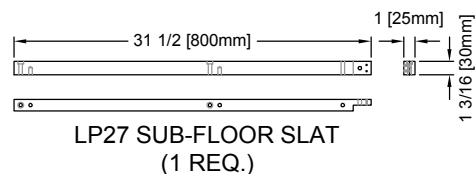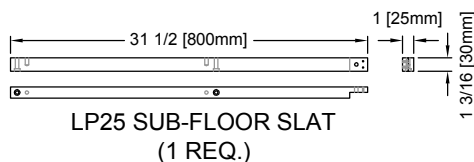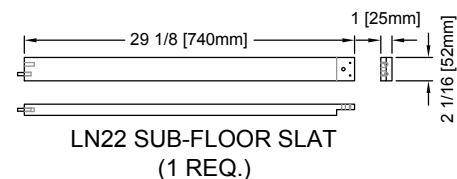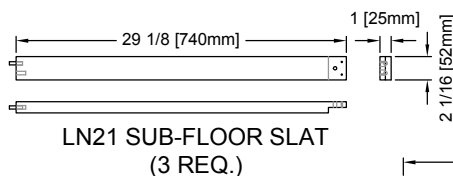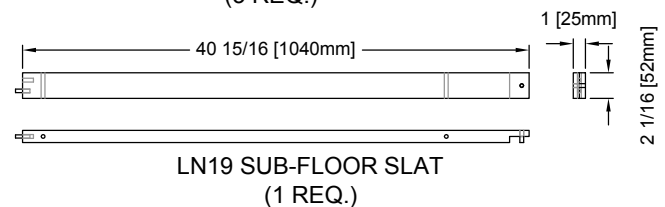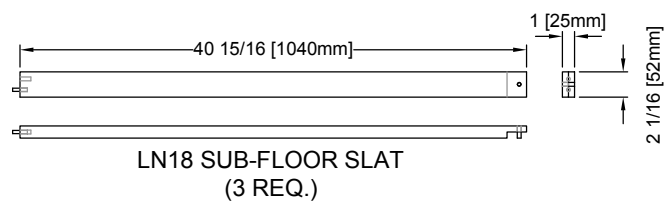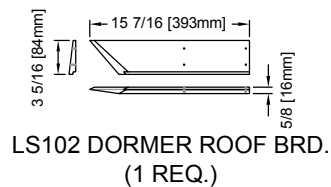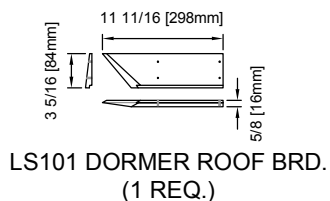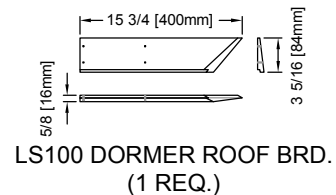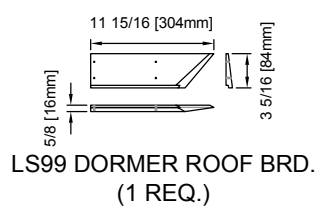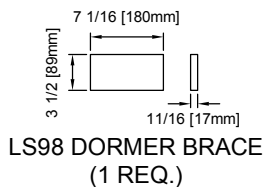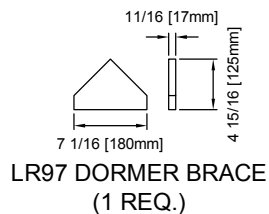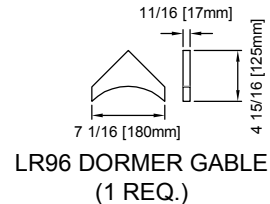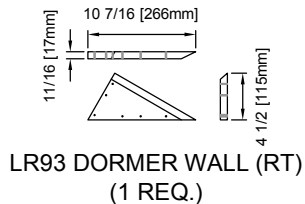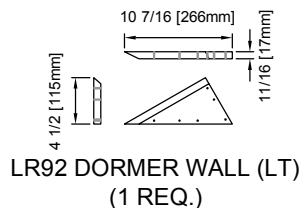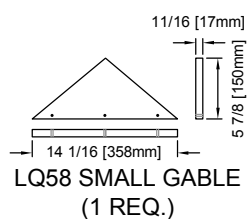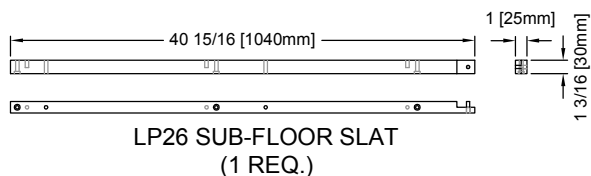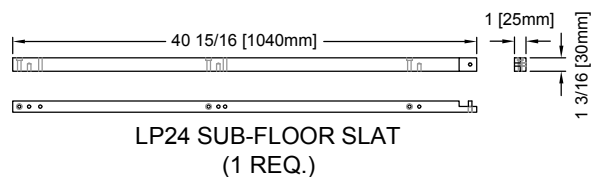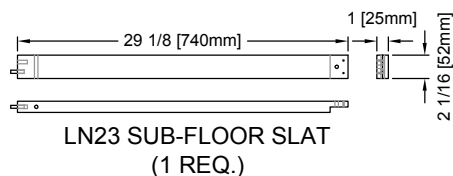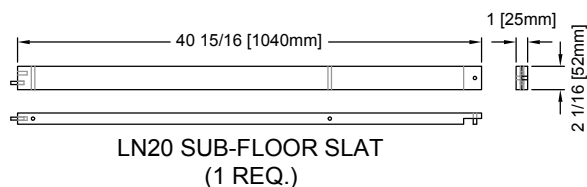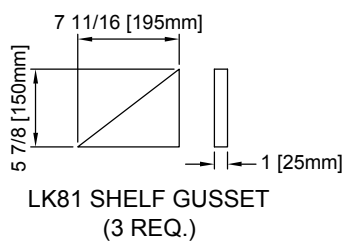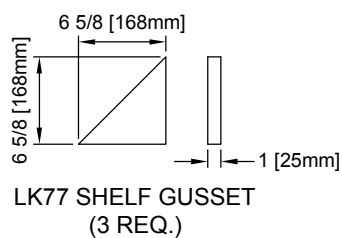

Parts Identification

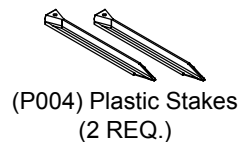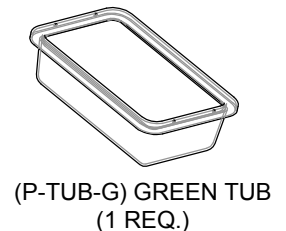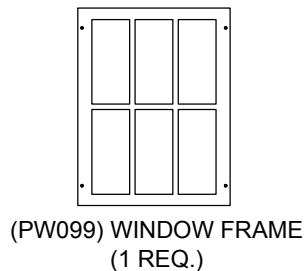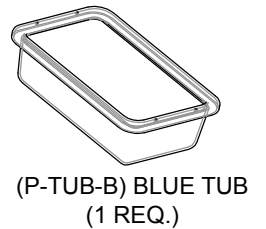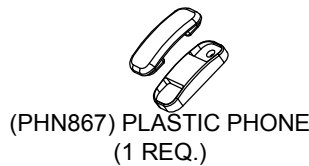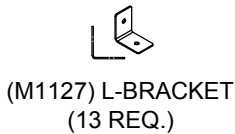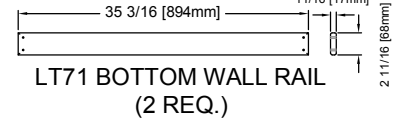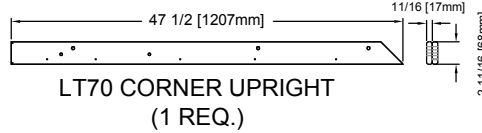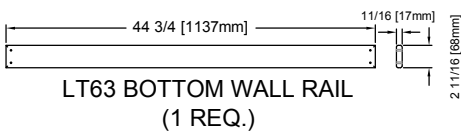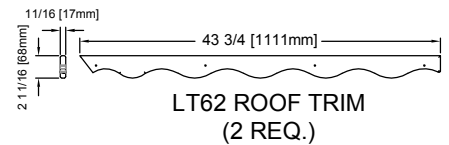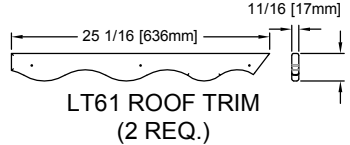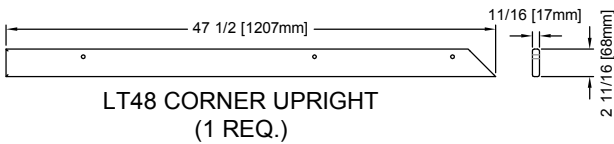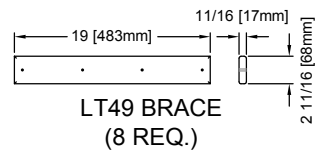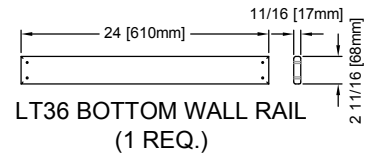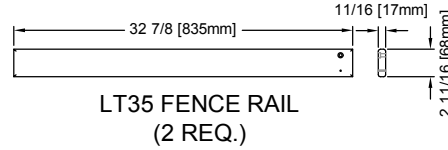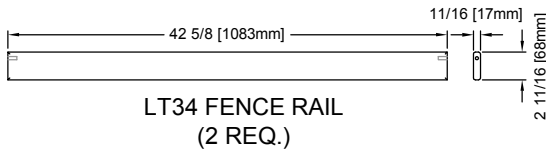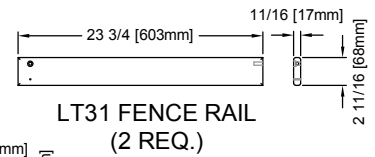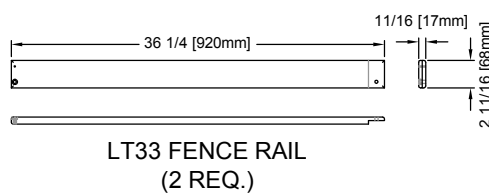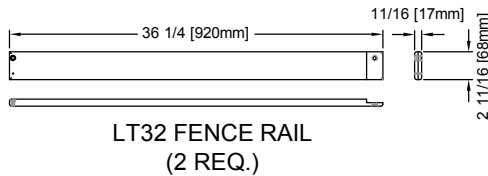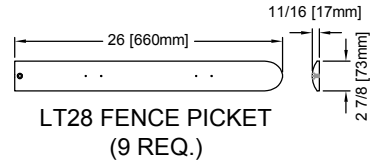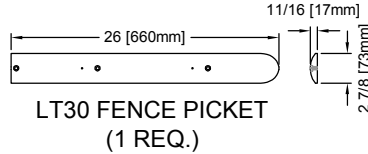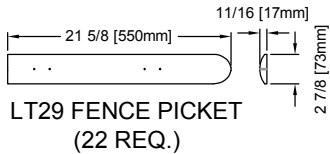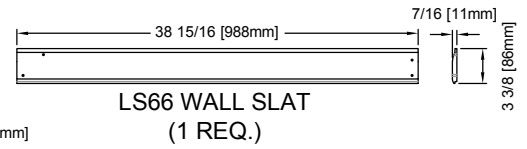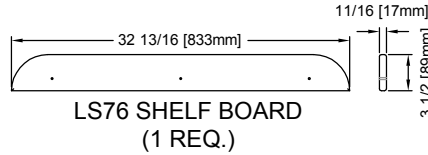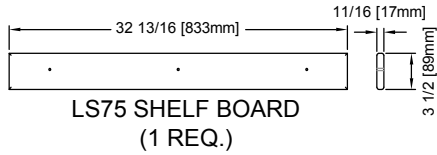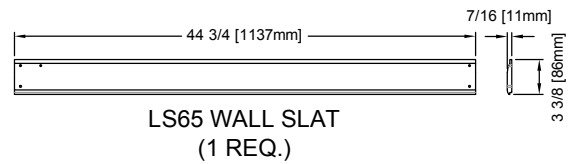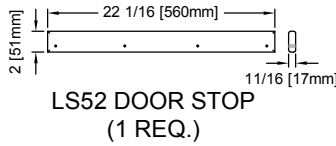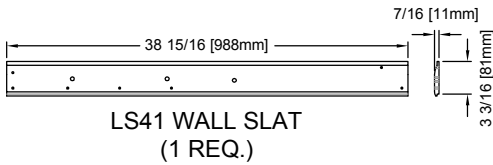


Hardware Identification



LW1/4 Lock Washer

FW1/4 Flat Washer

(31)

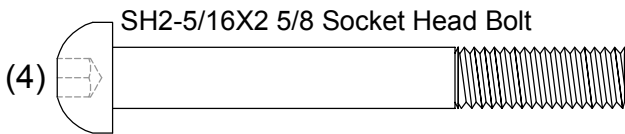



(57)

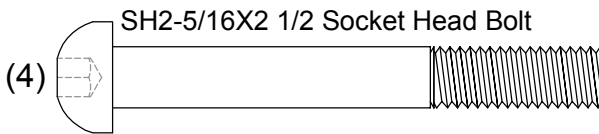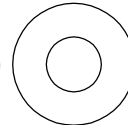

5/16" Flat Washer

5/16FW


(26)

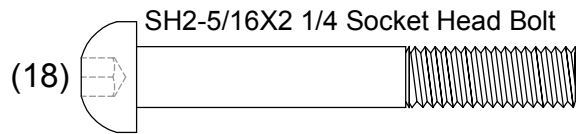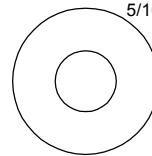



5/16" Lock Washer

5/16LW

 (26)




Imperial Metric

 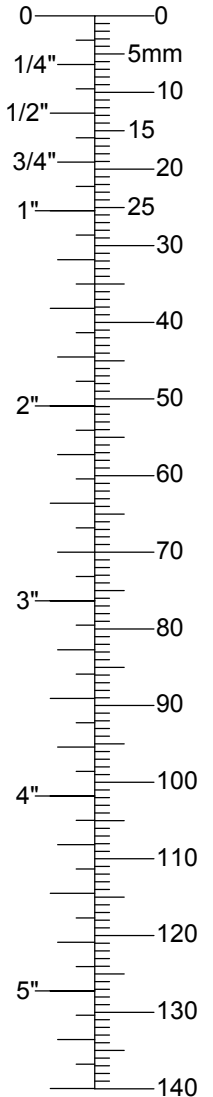


WS#8 X 3/4" Wood Screw

 (12)




WS1/8 X 2 1/8" Wood Screw

 (104)




WS1/8 X 2" Wood Screw

 (24)




WS1/8 X 1 3/4" Wood Screw

 (10)




WS1/8 X 1 5/8" Wood Screw

 (6)



WS1/8 X 1 3/8" Wood Screw

 (42)



WS1/8 X 1 1/8" Wood Screw

(150)



WS1/8 X 1" Wood Screw

(70)




WS1/8 X 5/8" Wood Screw

(2)



3/4" Tapping Screw

#14TS3/4

 

WS1/8 X 3/4" Wood Screw

(22)



WS1/8 X 3/8" Wood Screw

(4)



(26)

 
5/16" T-nut

5/16TN

1/4" Barrel Nut

(2)

SN1/4




Measuring hardware

It is very important that you get the right hardware in the correct place when assembling the unit. You can use the ruler below to measure your hardware or you can compare the hardware to the hardware identification page.

NOTES:


- 1) Do not include bolt head when measuring length of bolt.
- 2) Include full length of deck screw when measuring.

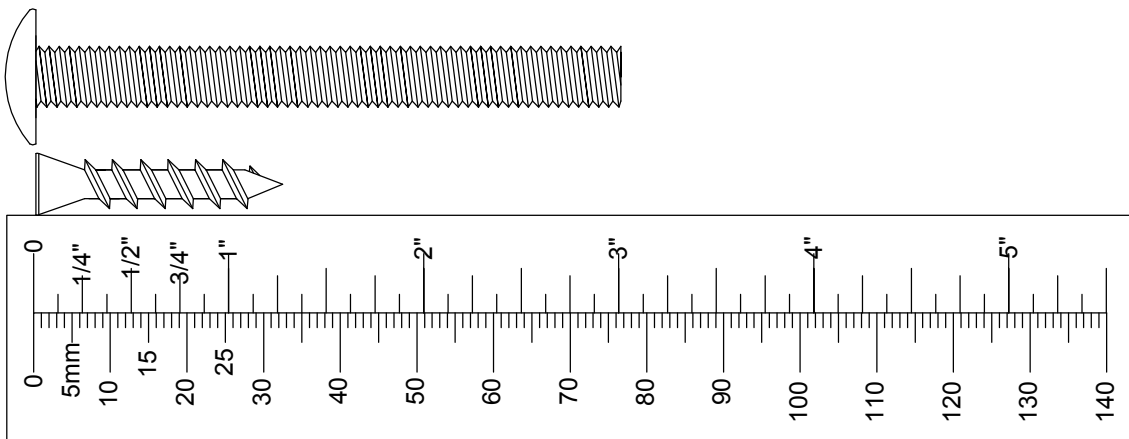




Phase 1

Sub-Floor Assembly

 Phase Hardware




Phase Parts

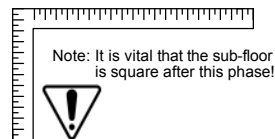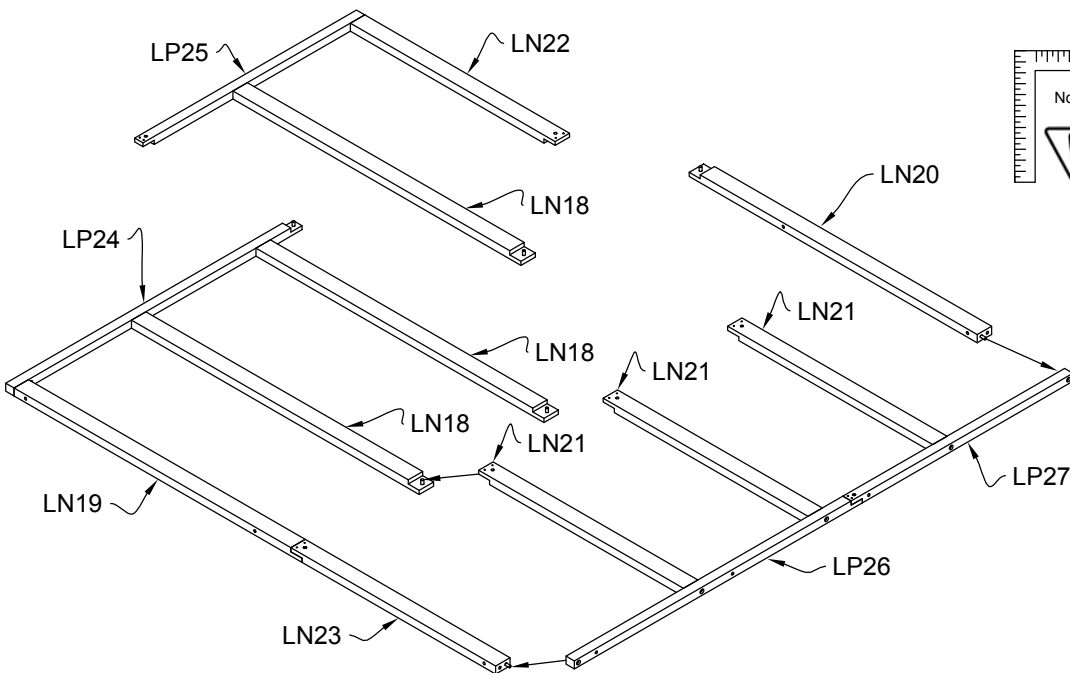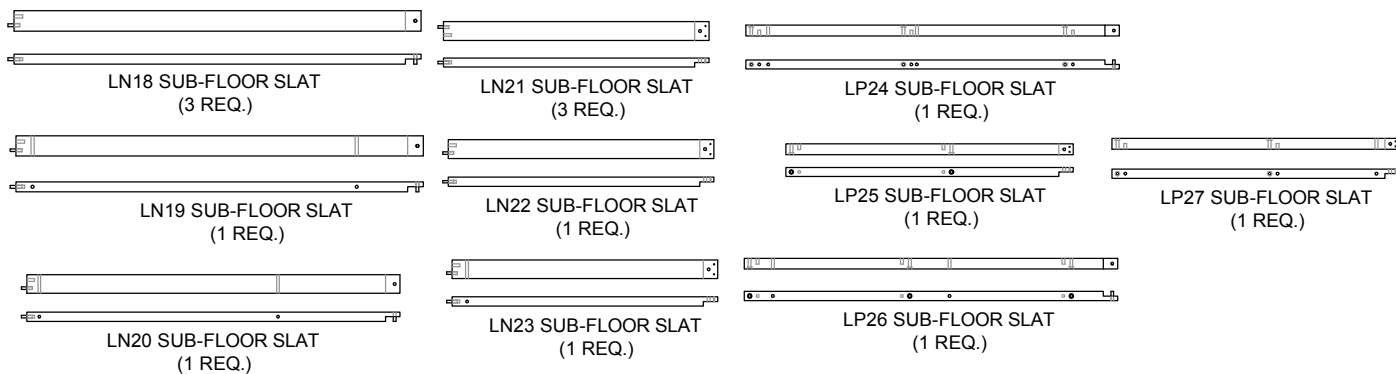

SHM1/4X1 3/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

DECK SCREWS


DECK SCREWS

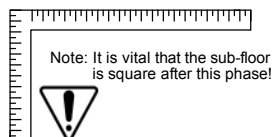


SHM1/4X1 3/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

WS1/8 X 2 1/8" Wood Screw
(80)


Phase Parts

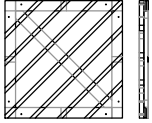

2A032 FLOOR SQUARE
(16 REQ.)

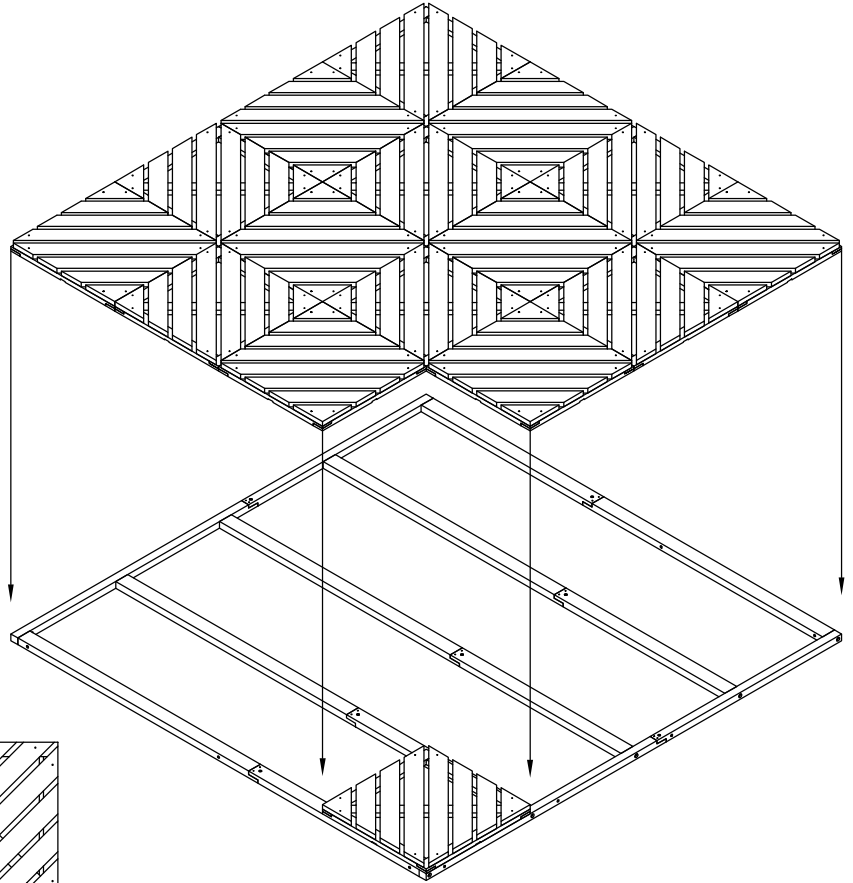

LAYOUT PATTERN

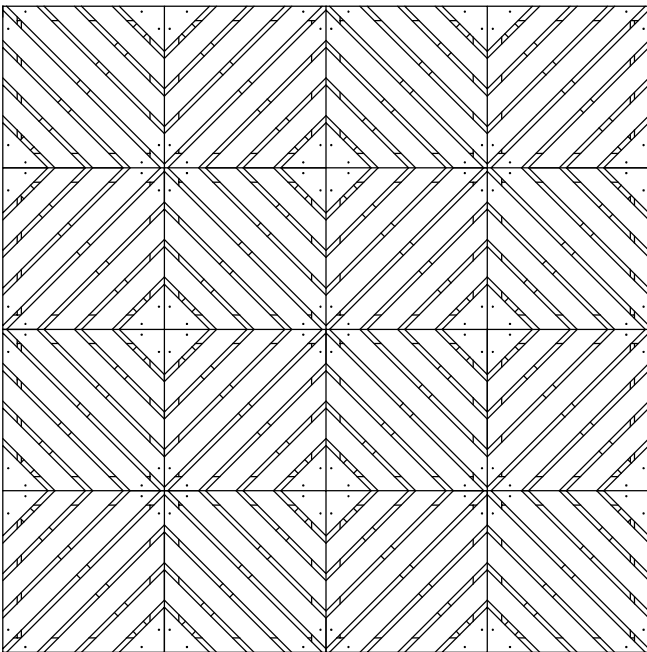

NOTE: MAKE SURE SQUARES ARE
FLUSH WITH OUTSIDE EDGE
SUB-FLOOR THEN SECURE EACH
SQUARE WITH (8) WOOD SCREWS!

WS1/8 X 2 1/8" Wood Screw

(6) SCREWS EACH
ON THESE ROWS

NO SCREWS
(NO CROSS SLAT
UNDERNEATH)






(4) SCREWS EACH
ON THESE ROWS

FLUSH ALL
AROUND




LP27

LP26

     Phase Hardware




Phase Parts

  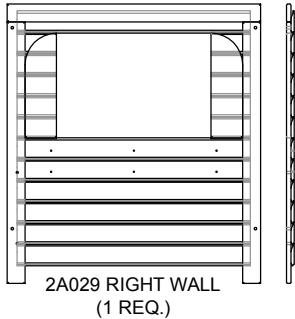

NOTE: MAKE SURE UPRIGHTS ARE ORIENTED CORRECTLY. T-NUTS ARE INSERTED TOWARD THE INSIDE OF THE UNIT

STEP 1:

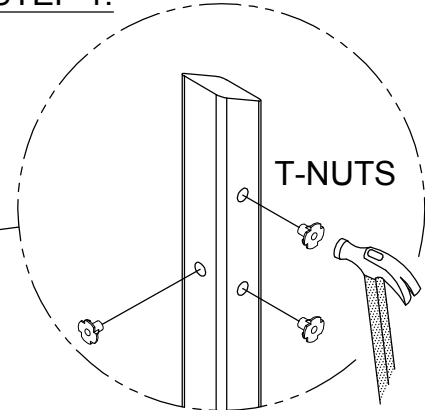

STEP 1: INSERT (5) T-NUTS INTO INSIDE HOLE OF EACH 'LJ104' MAKE SURE T-NUTS ARE FLUSH TO SURFACE

T-NUTS ORIENTED INSIDE

SH2-5/16X2 1/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

INSIDE VIEW
** ALL T-NUTS ARE TOWARD THE INSIDE OF THE UNIT **

UPRIGHT

INSIDE

WALL






FLUSH

LT71




'LT71' IS ATTACHED TO WALL FRAME WITH WS1/8 X 1 1/8" WOOD SCREWS (BOTTOM EDGES ARE FLUSH)

LT71

     Phase Hardware




Phase Parts

 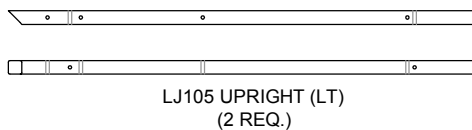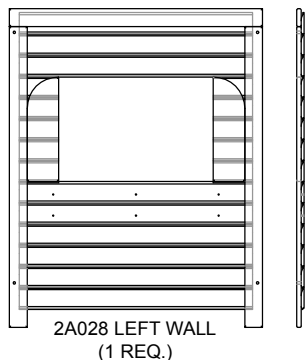


NOTE: MAKE SURE UPRIGHTS ARE ORIENTED CORRECTLY. T-NUTS ARE INSERTED TOWARD THE INSIDE OF THE UNIT

STEP 1:

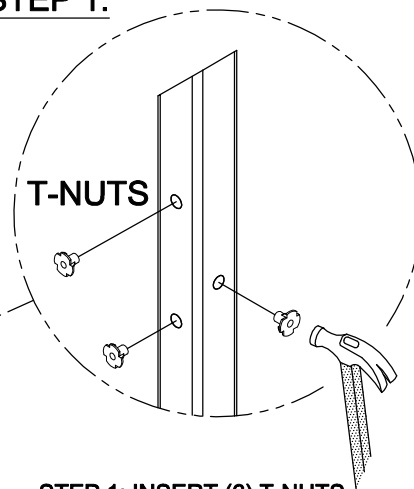

STEP 1: INSERT (6) T-NUTS INTO INSIDE HOLE OF EACH 'LJ105' MAKE SURE T-NUTS ARE FLUSH TO SURFACE

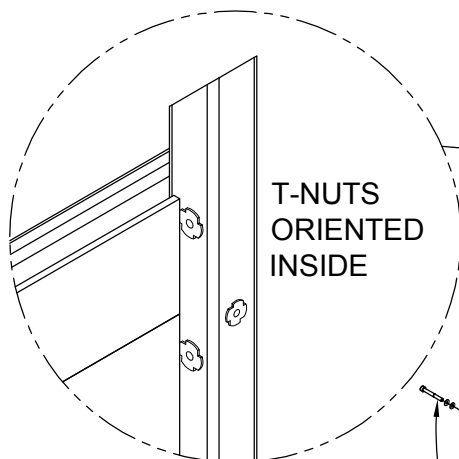

SH2-5/16X2 1/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

UPRIGHT


INSIDE

WALL

FLUSH




LT71

'LT71' IS ATTACHED TO WALL FRAME WITH WS1/8 X 1 1/8" WOOD SCREWS (BOTTOM EDGES ARE FLUSH)

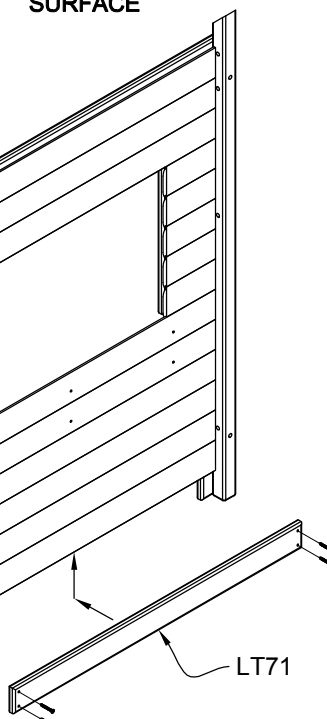


LT71

   
Phase Hardware



Phase Parts

 


LT48 CORNER UPRIGHT
(1 REQ.)

 

LT70 CORNER UPRIGHT
(1 REQ.)

LEFT WALL FROM PHASE 4

SH2-5/16X2 1/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

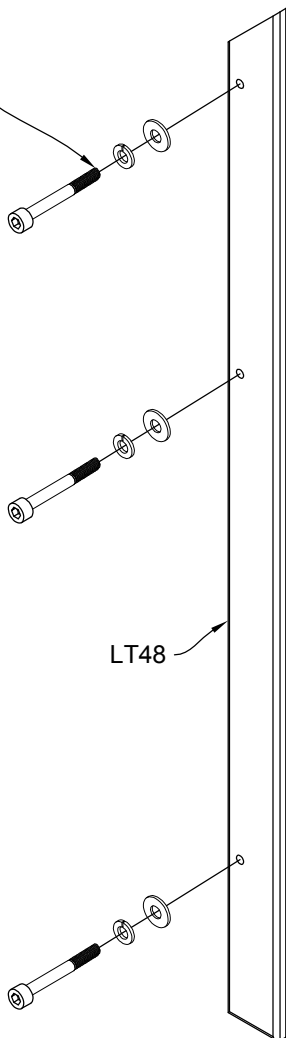






LT48

LT70



Phase 6

Front & Back Wall Attachment

     Phase Hardware



Phase Parts

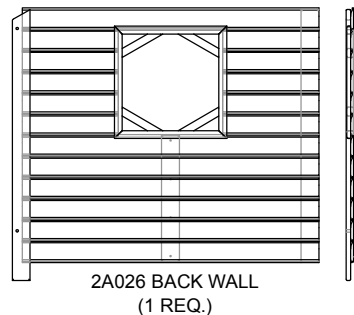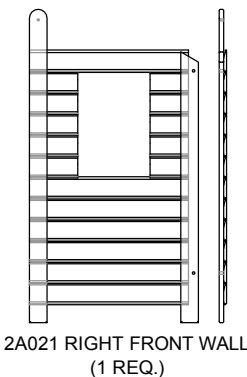

SH2-5/16X2 1/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

2A021

2A026 BACK WALL
(1 REQ.)

2A026

RIGHT WALL ASSEMBLY

RIGHT WALL

SH2-5/16X2 1/4 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

FRONT WALL

'LT36' IS ATTACHED TO WALL FRAME
WITH WS1/8 X 1 1/8\" WOOD SCREWS
(BOTTOM & SIDE EDGES ARE FLUSH)

LT36



 
BACK WALL
NOT SHOWN FOR CLARITY

Phase Hardware



**FRONT WALL
NOT SHOWN FOR CLARITY**

Phase Parts




LT63 BOTTOM WALL RAIL
(1 REQ.)

(5) WS1/8 X 1 5/8" Wood Screw


(4) WS1/8 X 1 1/8" Wood Screw

STEP 1:

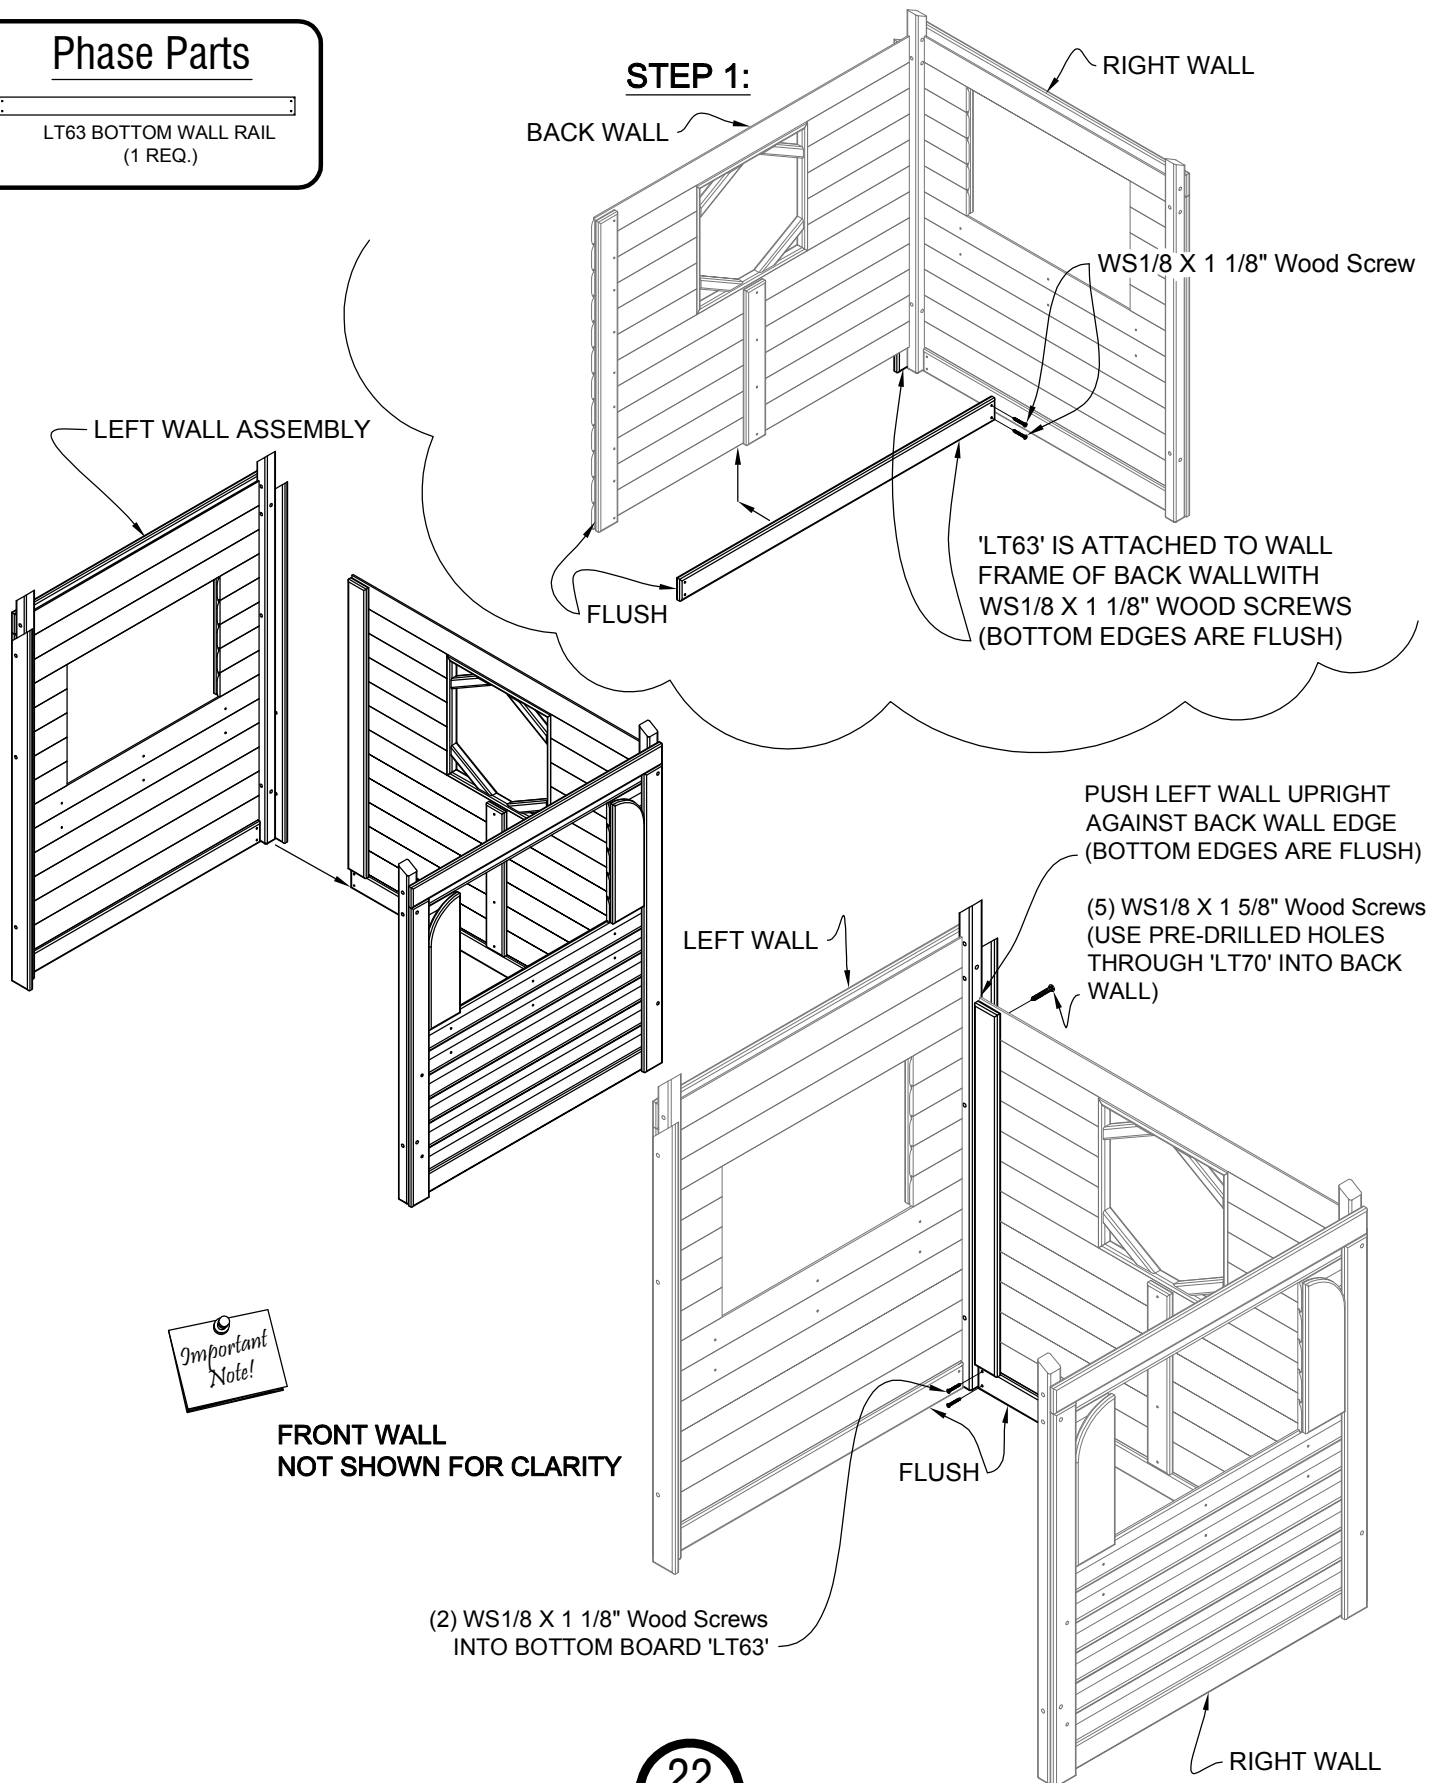


**FRONT WALL
NOT SHOWN FOR CLARITY**

 
Phase Hardware




Phase Parts

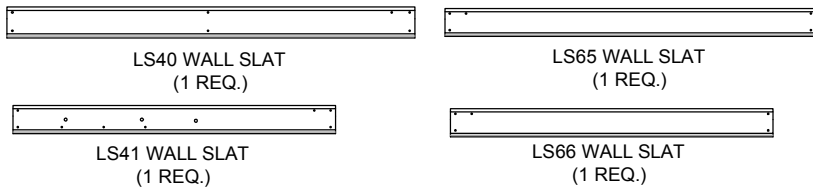

SH2-1/4X1 1/8 Socket Head Bolt
1/4" LOCK WASHER
& 1/4" FLAT WASHER

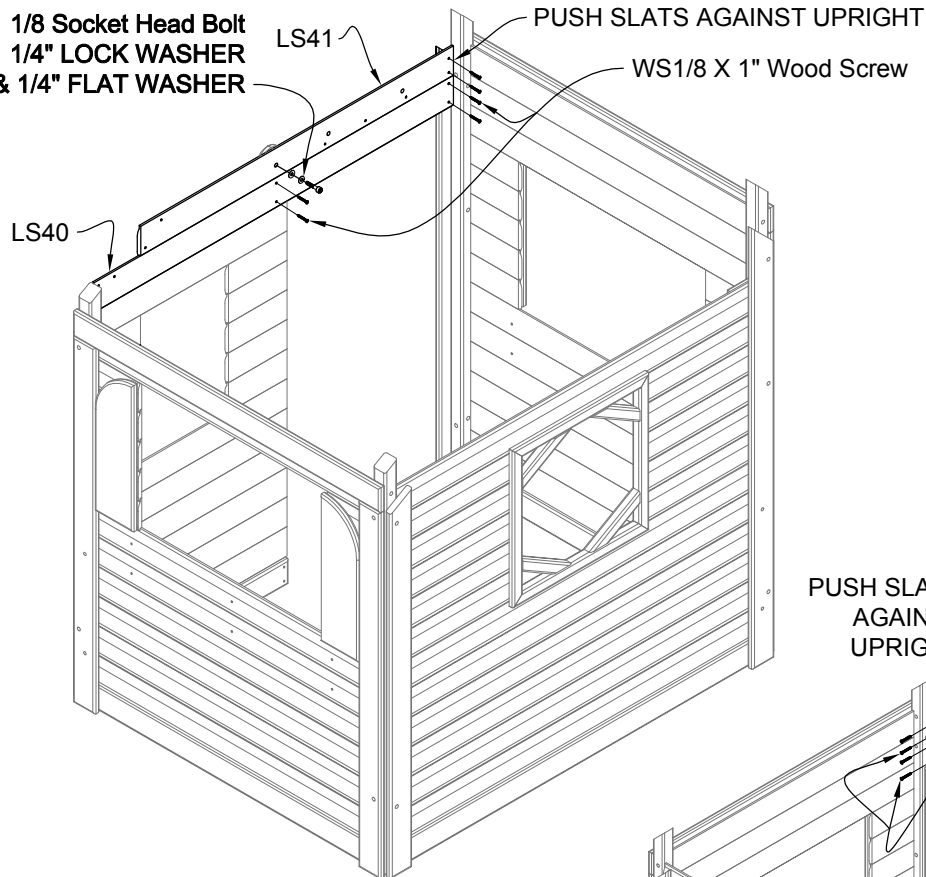



PUSH SLATS
AGAINST
UPRIGHT

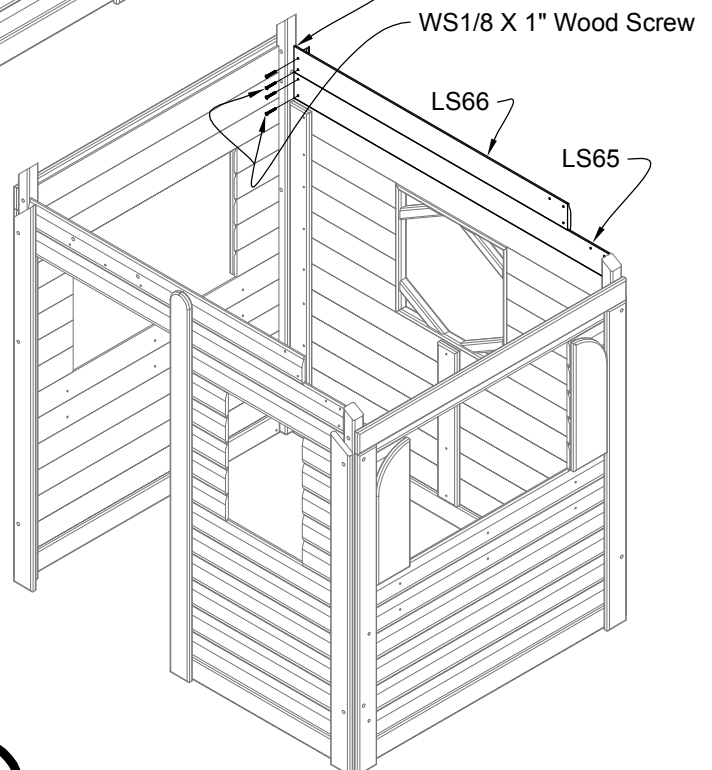



Phase
9

Front & Back Gable
Attachment

 Phase Hardware

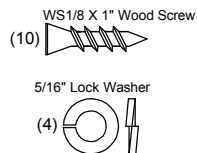

Phase Parts

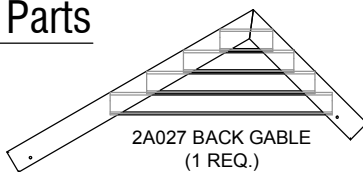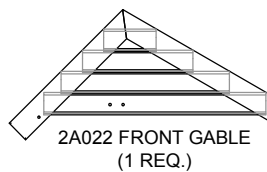

SH2-5/16X2 5/8 Socket Head Bolt
LOCK WASHER
& FLAT WASHER


2A022

WS1/8 X 1" Wood Screw
(INSTALL SCREWS IN REMAINING
OPEN SLAT HOLES AFTER GABLE HAS
BEEN ATTACHED)


SH2-5/16X2 5/8 Socket Head Bolt
LOCK WASHER
& FLAT WASHER

2A027

 
Phase Hardware




Phase Parts

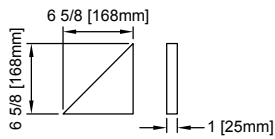


LK77 SHELF GUSSET
(3 REQ.)

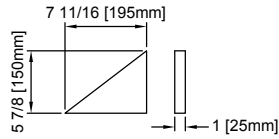


LK81 SHELF GUSSET
(3 REQ.)

 

2A034 WINDOW SILL
(1 REQ.)


 


LS75 SHELF BOARD
(1 REQ.)

 

LS76 SHELF BOARD
(1 REQ.)

LEFT WALL SHELF

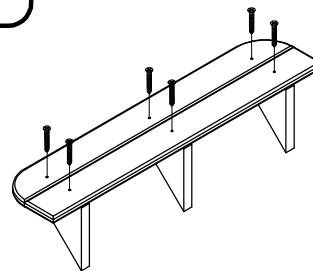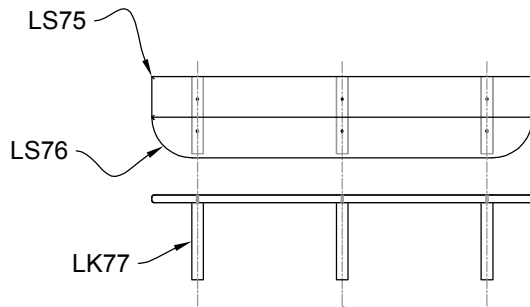



WS1/8 X 2" Wood Screw

FLUSH

LK77

CENTER GUSSETS ON PRE-DRILLED HOLES

RIGHT WALL SHELF

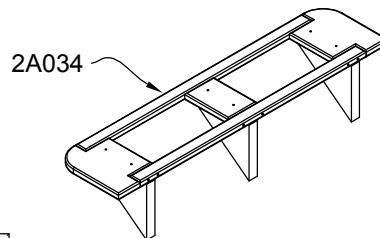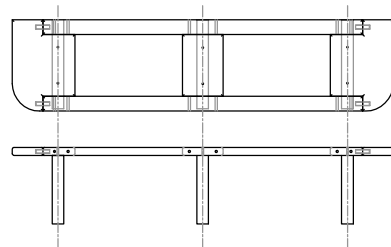

2A034

WS1/8 X 2" Wood Screw

FLUSH


LK81

5 7/8

CENTER GUSSETS ON PRE-DRILLED HOLES


Phase Hardware

WS1/8 X 2" Wood Screw
(12)

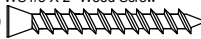


Phase Parts

SHELF ASSEMBLIES FROM
PREVIOUS PHASE

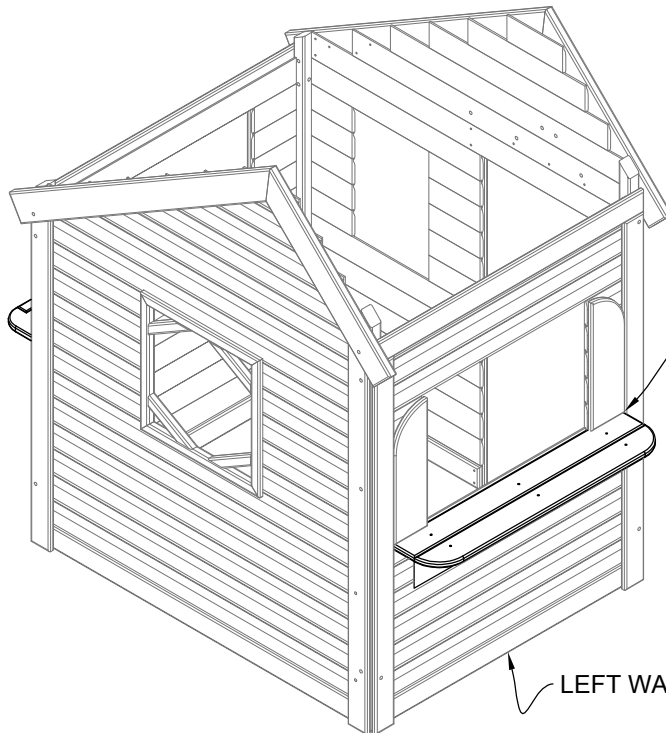

CENTER SHELF AND FLUSH WITH WINDOW EDGE.
ATTACH TO WALL WITH WOOD SCREWS
THROUGH PRE-DRILLED HOLES ON THE
INSIDE OF THE WALL AND INTO THE GUSSETS.
(TYPICAL FOR RIGHT & LEFT WALLS)

LEFT WALL

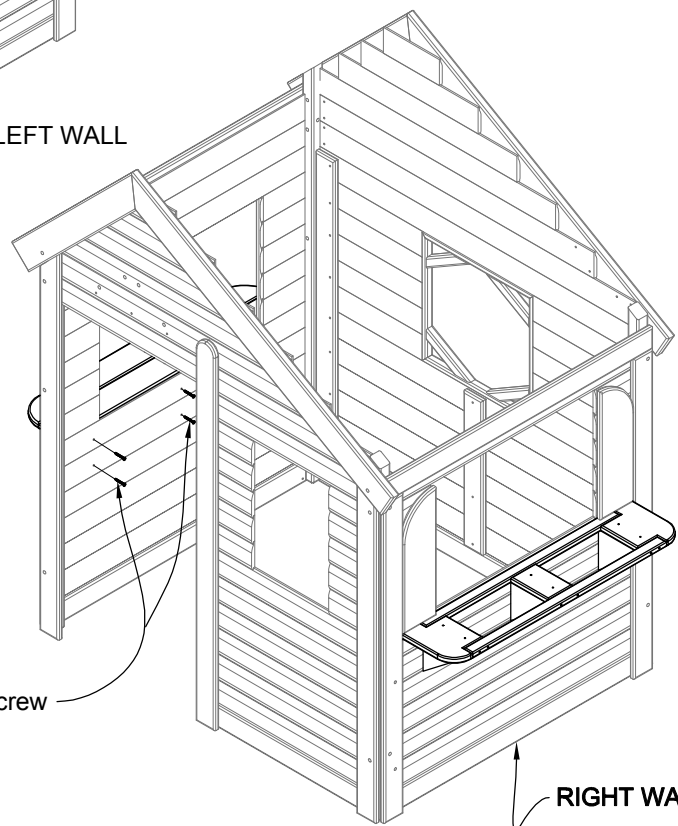


WS1/8 X 2" Wood Screw

 
RIGHT WALL

Phase Hardware

WS1/8 X 1" Wood Screw
(32)






Phase Parts




LT49 BRACE
(8 REQ.)



**TYPICAL INSIDE VIEW / LAYOUT FOR RIGHT & LEFT WALLS
OTHER PARTS NOT SHOWN FOR CLARITY**

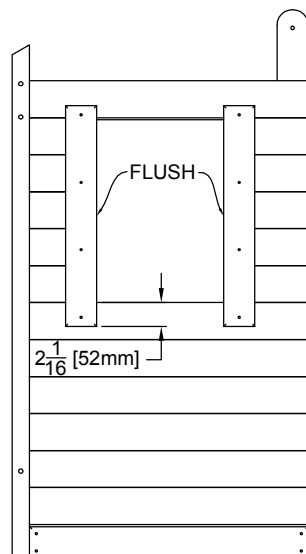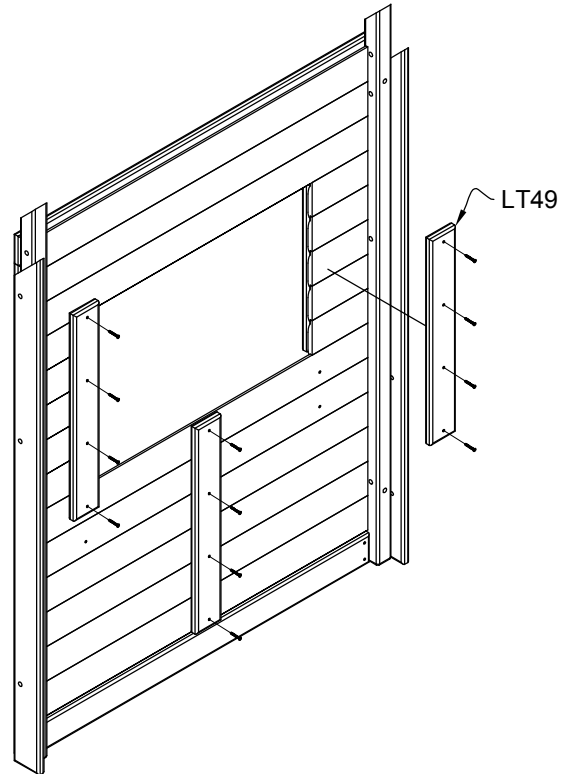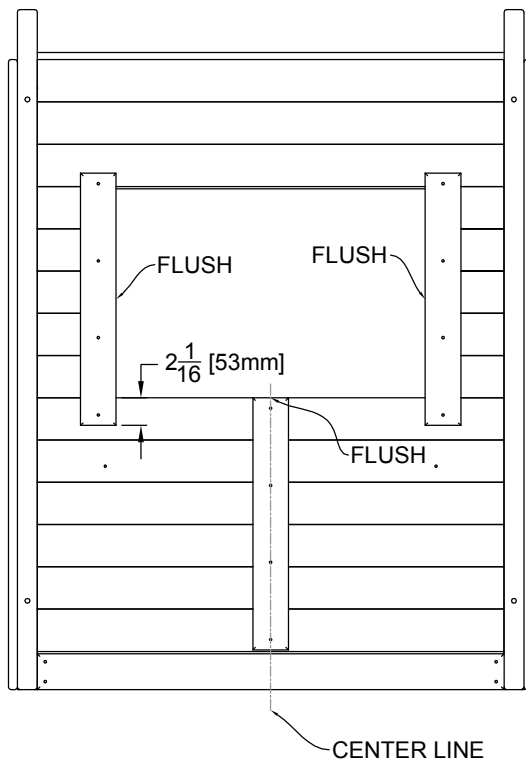


INSIDE VIEW OF FRONT WALL

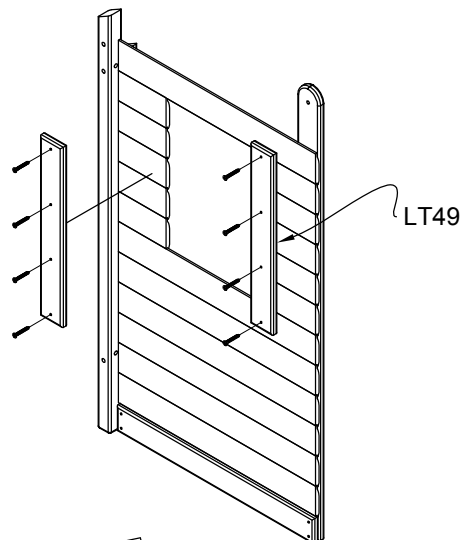


**INSIDE VIEW / LAYOUT OF FRONT WALL
OTHER PARTS NOT SHOWN FOR CLARITY**


Phase Hardware

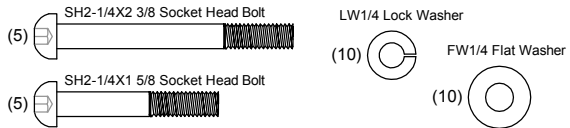


Phase Parts

 

LT28 FENCE PICKET
(9 REQ.)

 

LT30 FENCE PICKET
(1 REQ.)

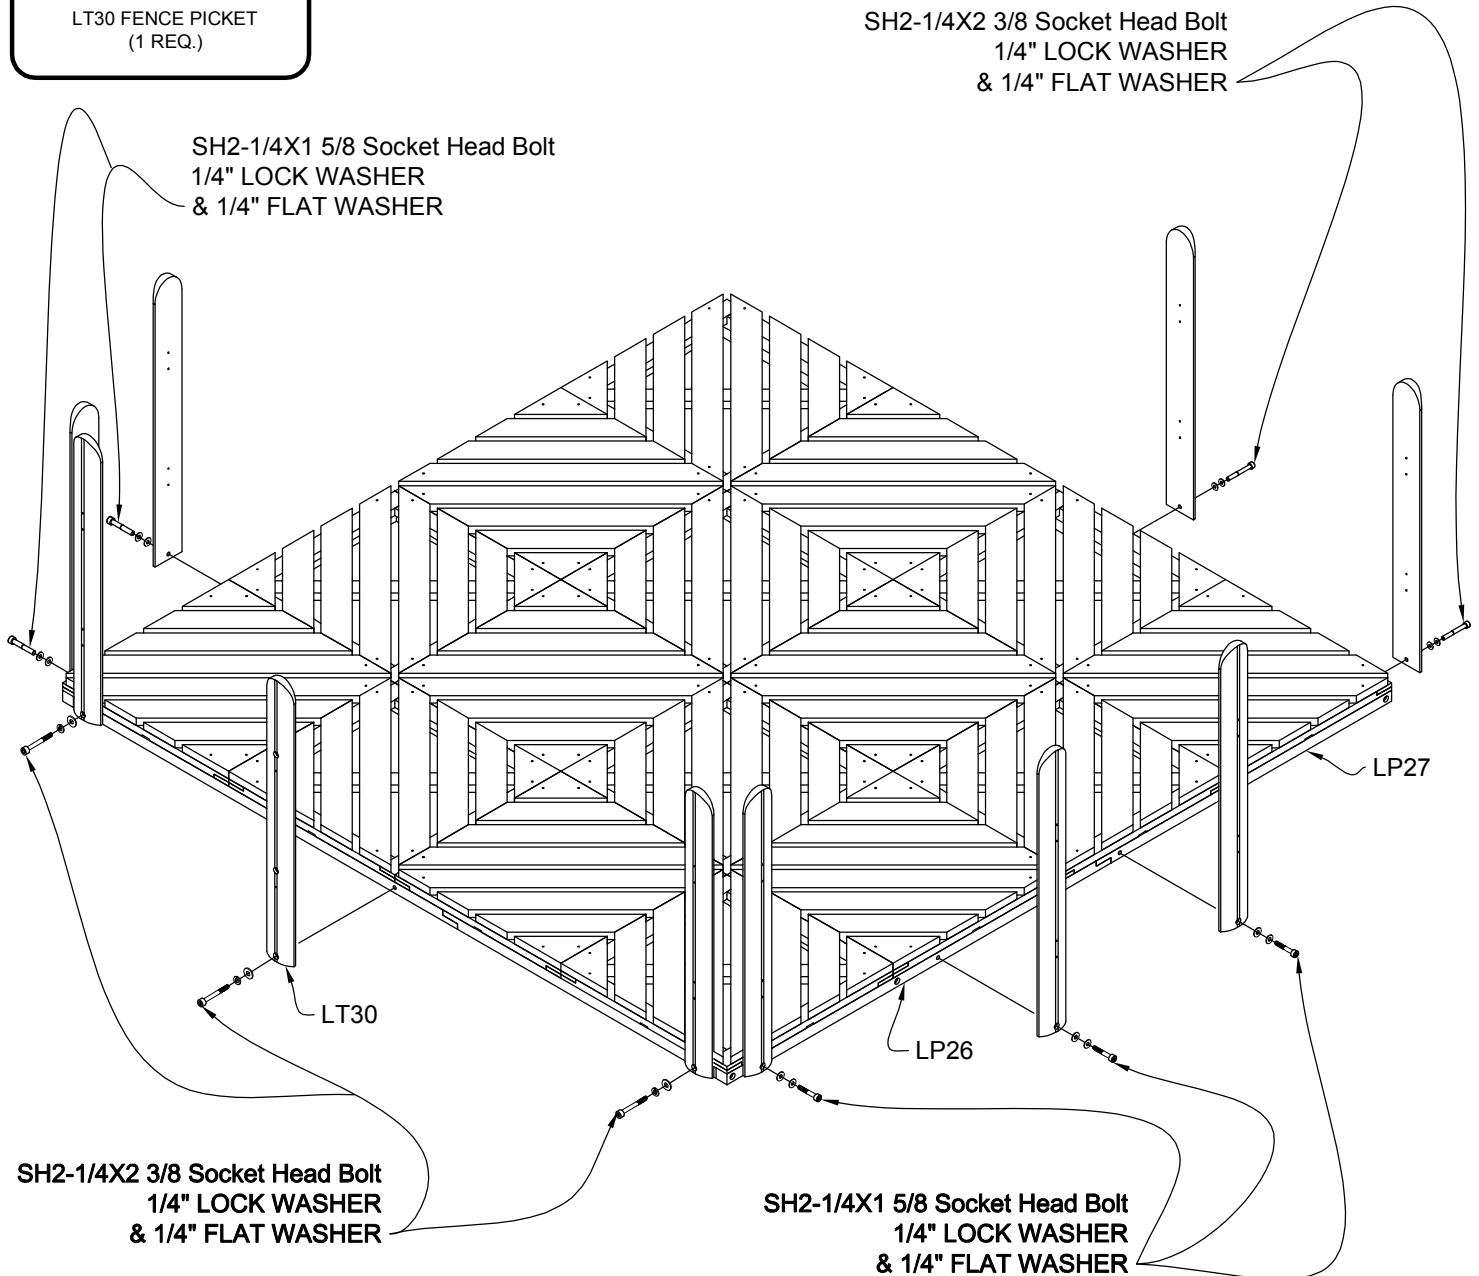

Phase
14

Place Cottage
On Floor




PLACE THE FLOOR ASSEMBLY IN THE SAFE AREA YOU HAVE CHOSEN (MAKE SURE THE AREA IS LEVEL). NOTE THE ORIENTATION OF THE COTTAGE DOOR IN RELATIONSHIP TO THE FLOOR ASSEMBLY WITH FENCE UPRIGHTS ATTACHED, AS SHOWN BELOW.




DO NOT USE THE SHELVES TO LIFT THE COTTAGE ONTO THE FLOOR.


THIS MAY DAMAGE THE SHELVES!

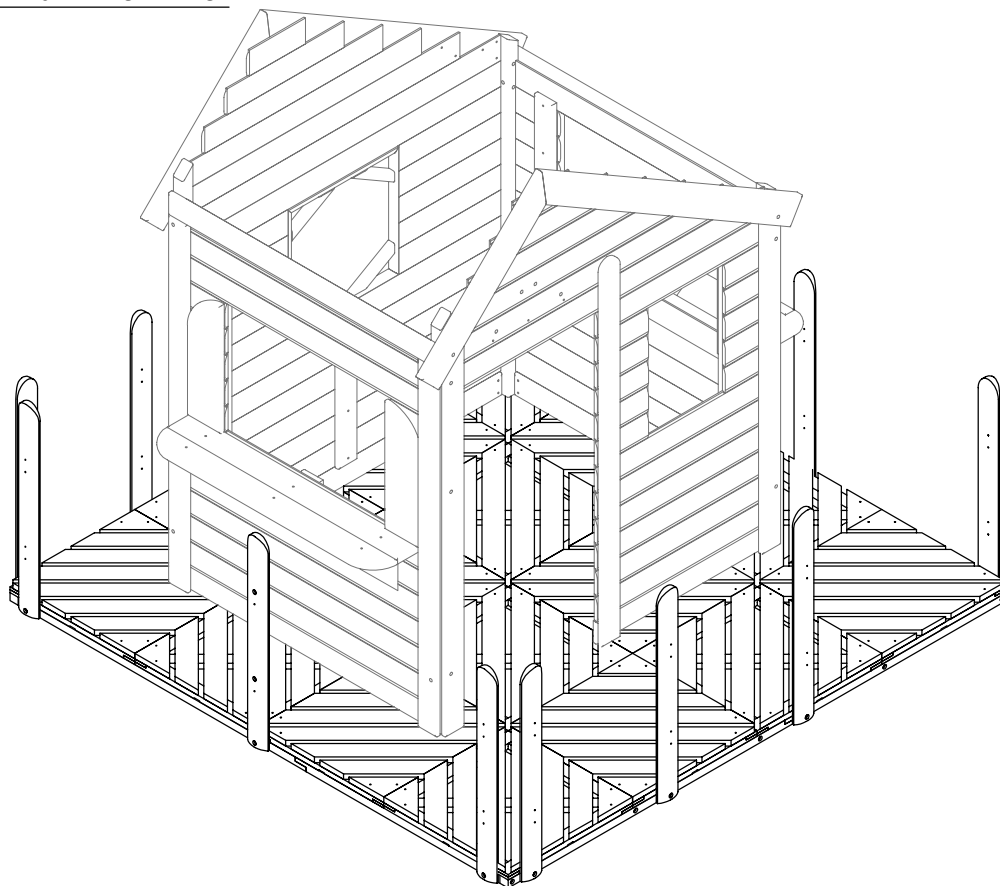


PLACE THE COTTAGE TOWARDS THE CENTER OF THE FLOOR FOR NOW (TEMPORARY). THIS WILL ALLOW ROOM TO WORK AROUND THE COTTAGE AS WE PROCEED WITH THE FENCE ASSEMBLY.

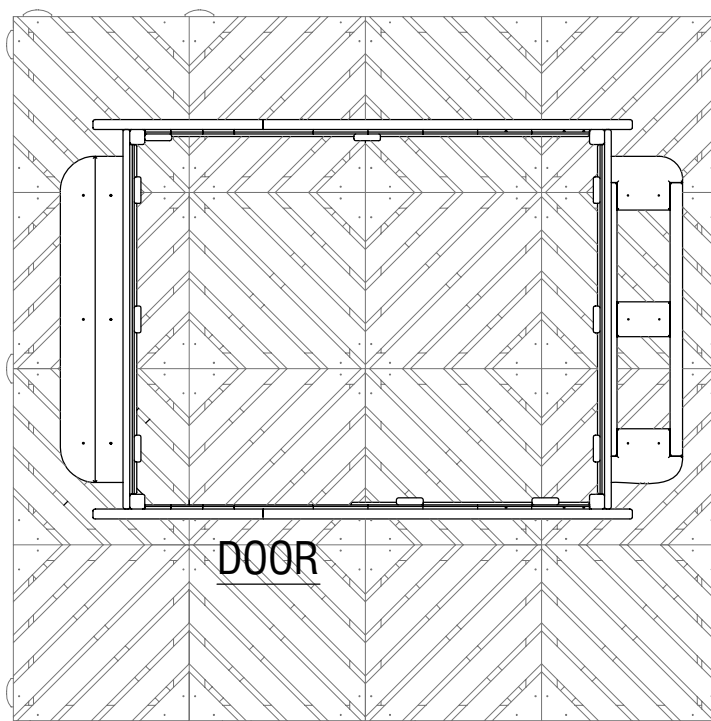



Phase Hardware

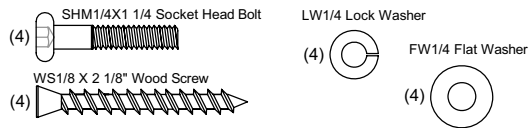


Phase Parts

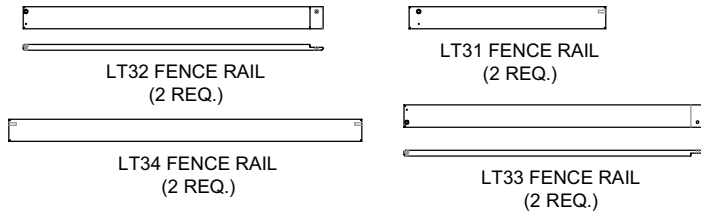



TYPICAL DETAIL

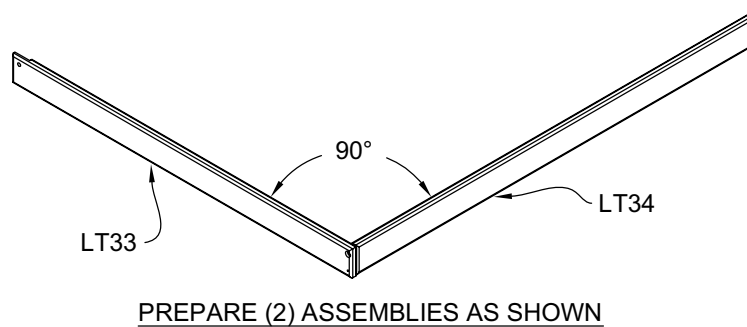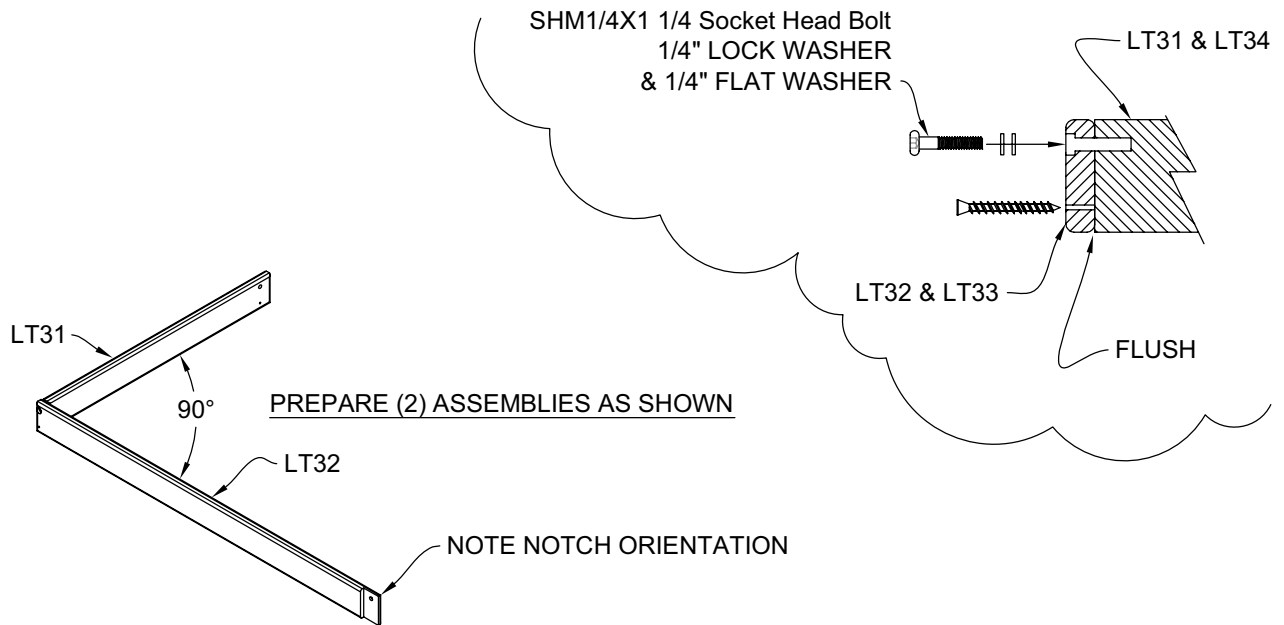


Phase Hardware

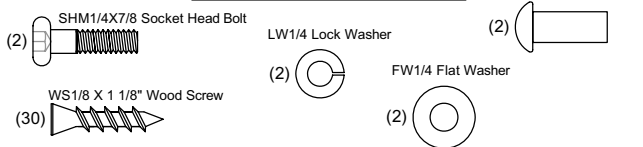


**COTTAGE
NOT SHOWN FOR CLARITY**

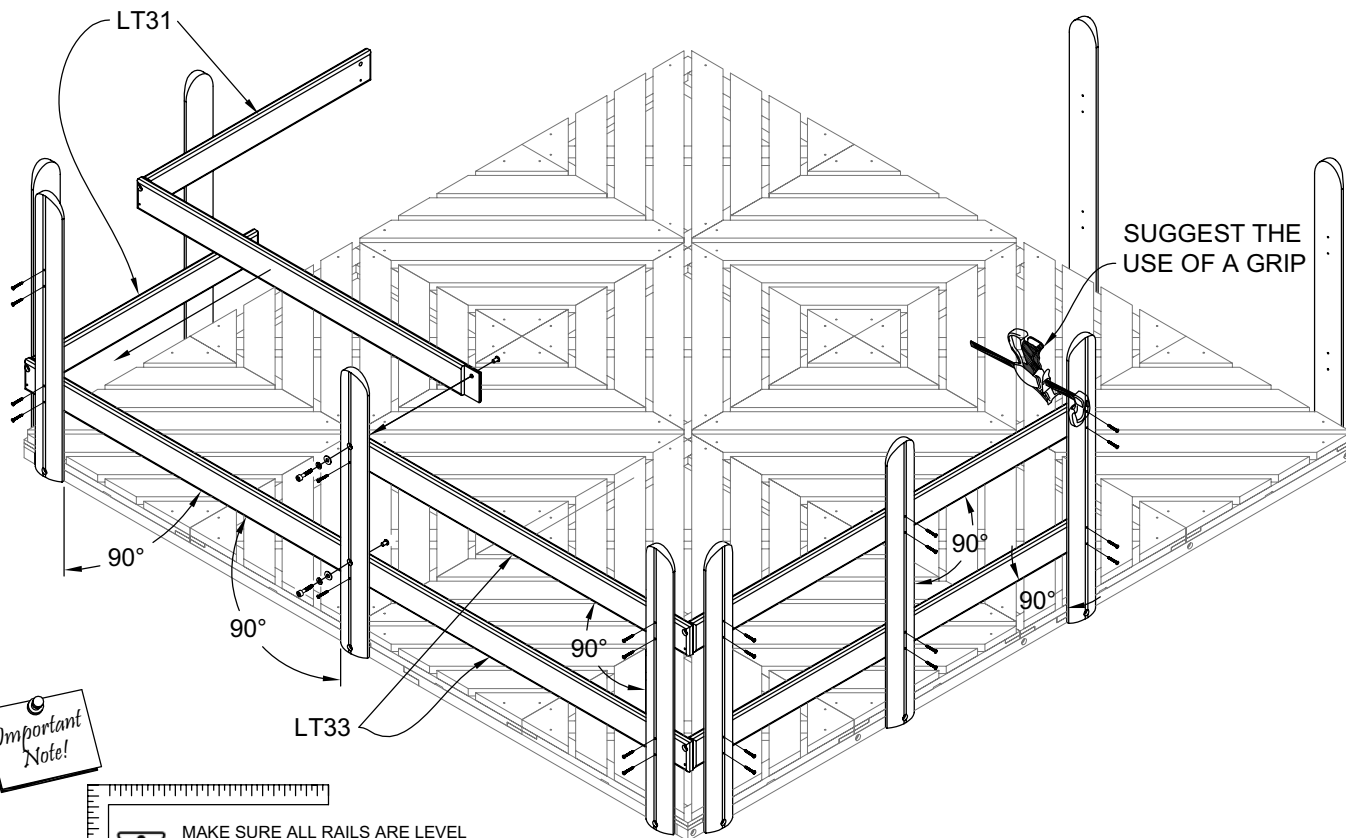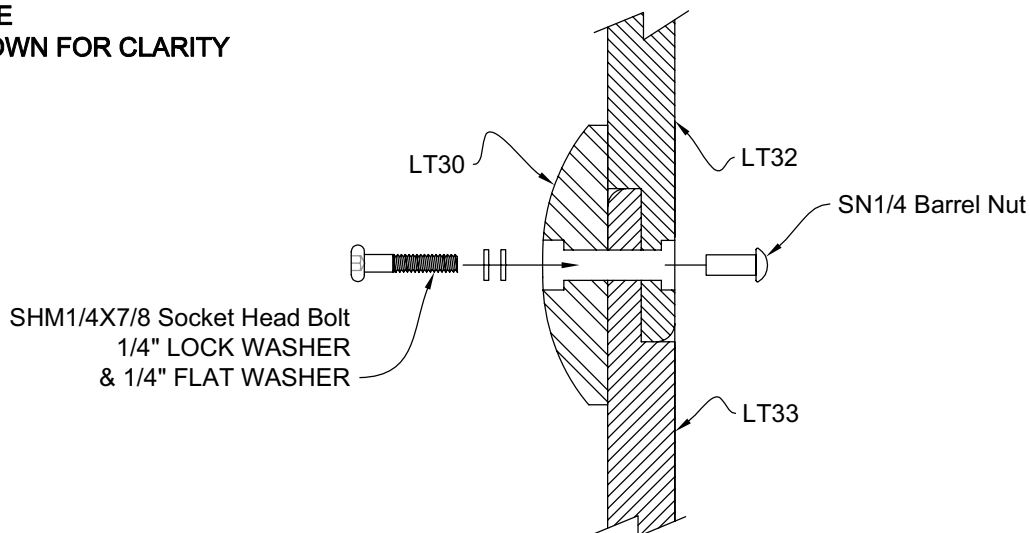


Phase Hardware

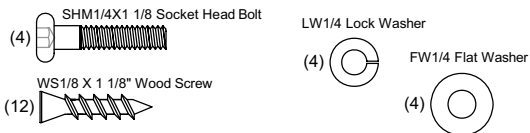

Phase Parts

 

CAREFULLY POSITION / ALIGN COTTAGE WITH
HOLES IN REAR FENCE RAILS 'LT31' THEN
ATTACH 'LT35' AS SHOWN BELOW.

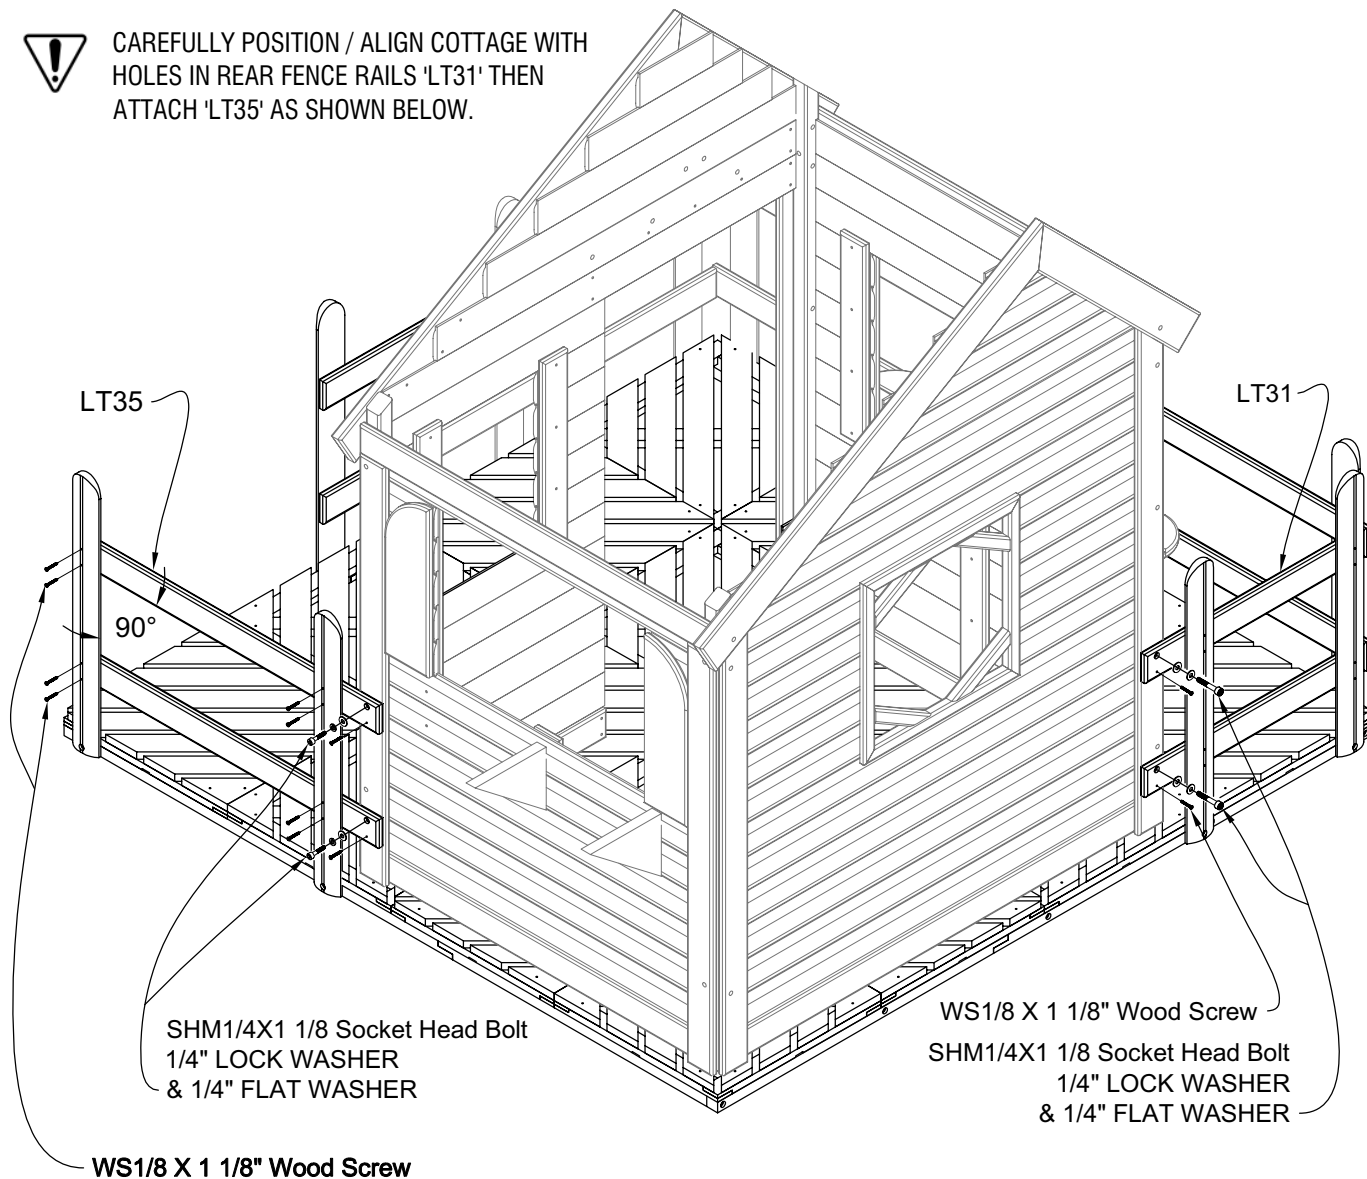

Phase Hardware

3/4" Tapping Screws
#14TS3/4
(26)

FW1/4 Flat Washer
(26)



**STUDY PLAN VIEW BELOW FOR
BRACKET LOCATIONS**

Phase Parts



(M1127) L-BRACKET
(13 REQ.)




FENCE RAIL BRACKETS:
CENTER BRACKETS VERTICALLY ON RAILS AND ATTACH
WITH (2) #14 X 3/4 TAPPING SCREWS EACH
(TYPICAL 8 PLACES)



L-BRACKETS



FENCE ENTRY BRACKETS:
POSITION BRACKETS ON FLOOR AND
AGAINST EACH ENTRY PICKET, ATTACH
WITH (2) #14 X 3/4 TAPPING SCREWS EACH
(TYPICAL 2 PLACES)

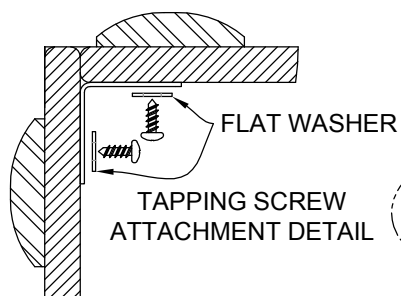

COTTAGE INTERIOR BRACKETS:
POSITION BRACKETS ON FLOOR AND AGAINST WALL
WHERE SHOWN AND ATTACH WITH (2) #14 X 3/4
TAPPING SCREWS EACH
(TYPICAL 3 PLACES)

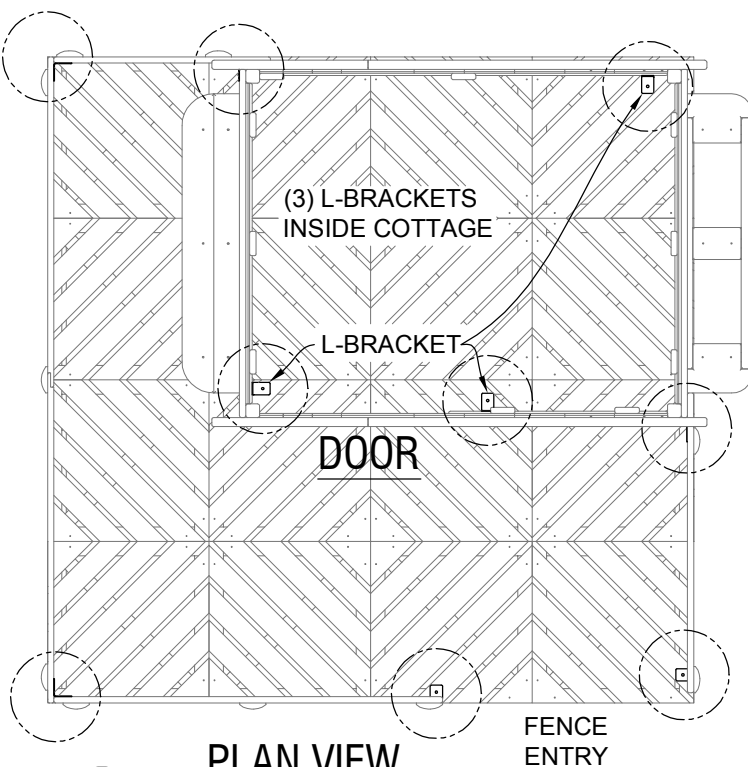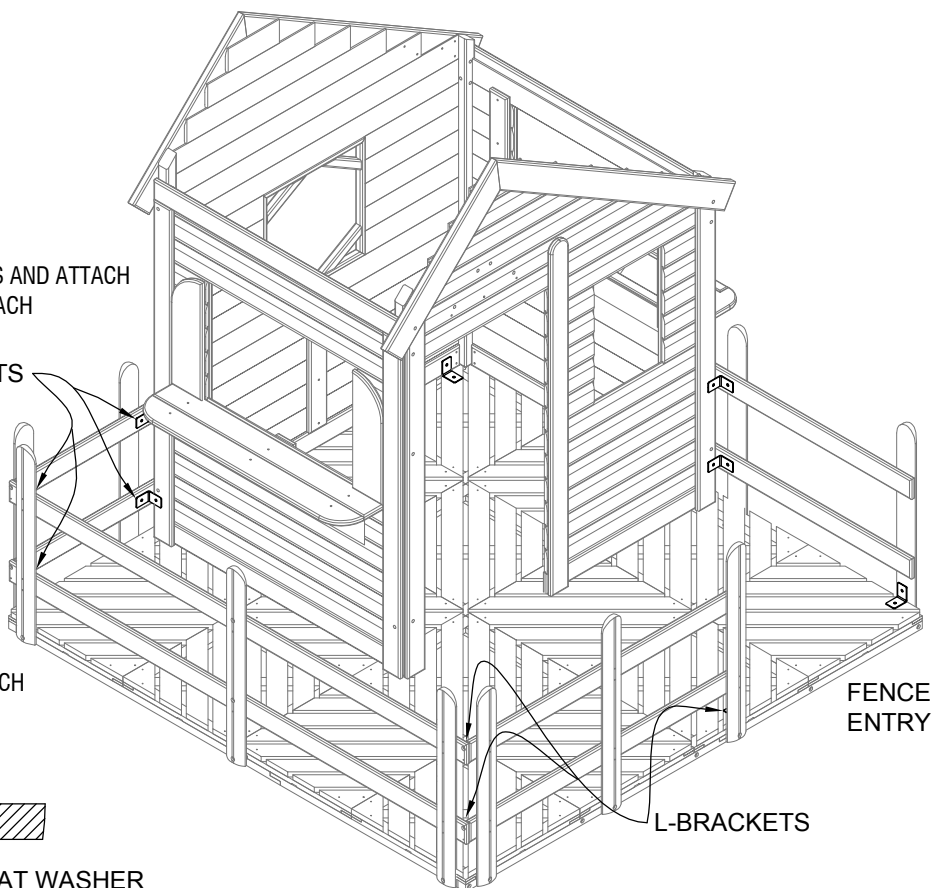

PLAN VIEW

Phase 19

Fence Picket Attachment






Phase Hardware

WS1/8 X 1 1/8" Wood Screw
(88)

Phase Parts

LT29 FENCE PICKET
(22 REQ.)

WS1/8 X 1 1/8" Wood Screw

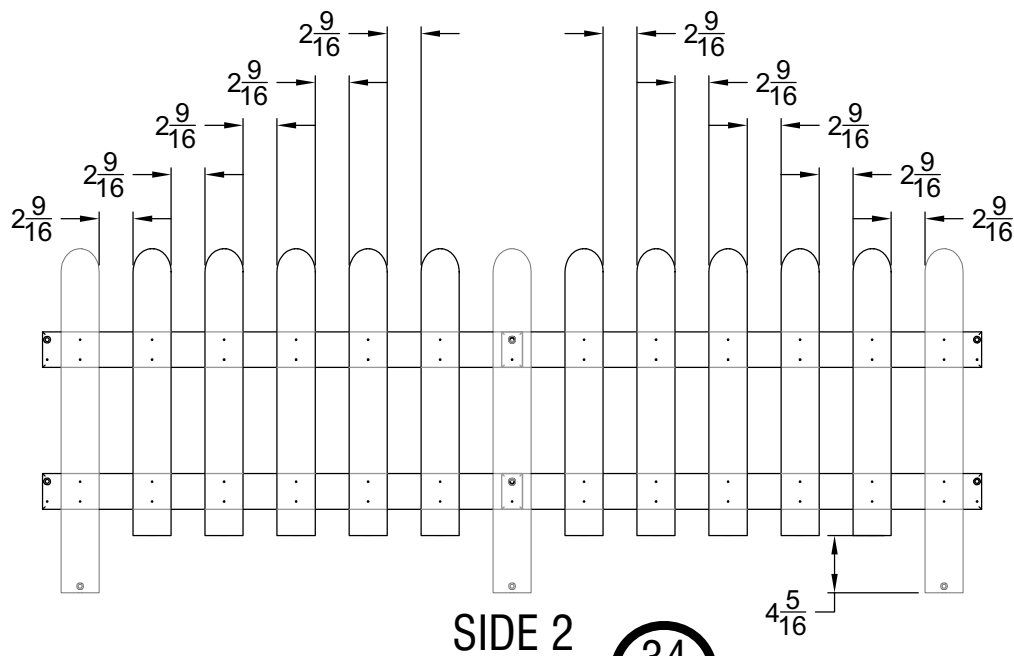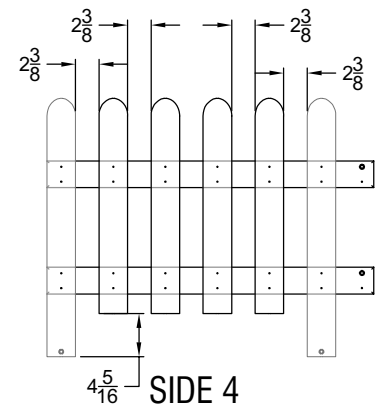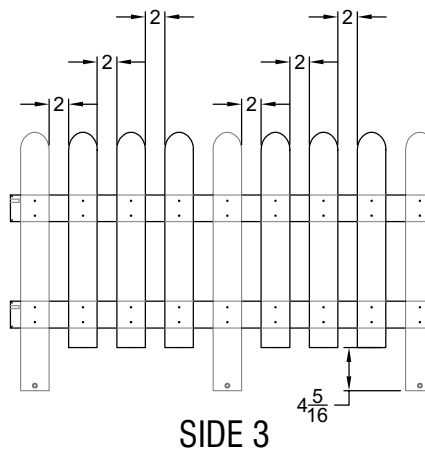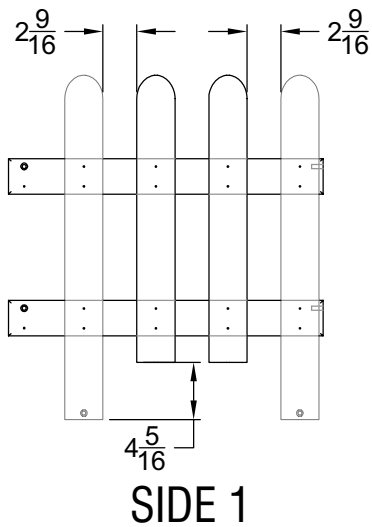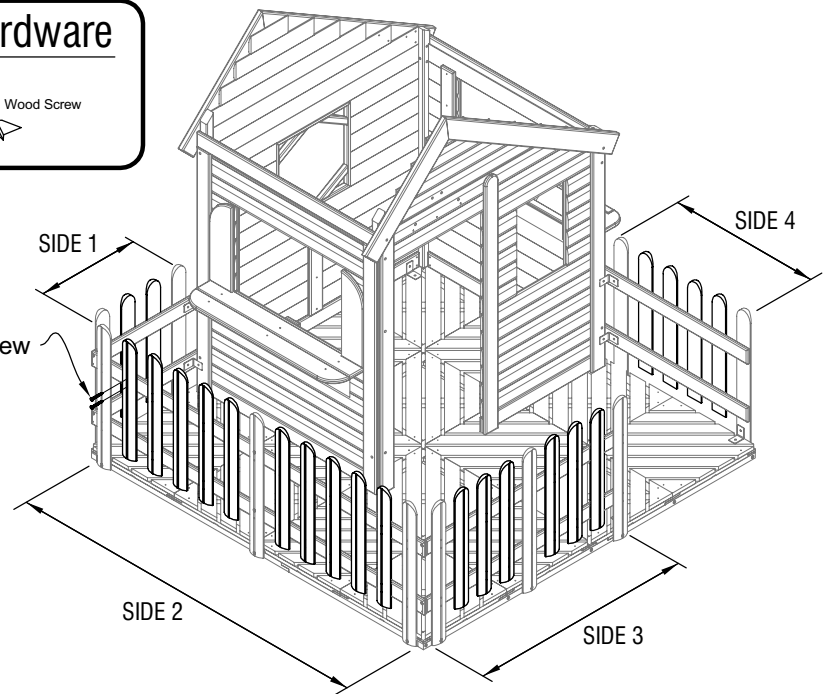

Phase Hardware


WS1/8 X 2 1/8" Wood Screw
(14)

WS1/8 X 1 3/8" Wood Screw
(14)




**FLOOR & FENCE
NOT SHOWN FOR CLARITY**

Phase Parts

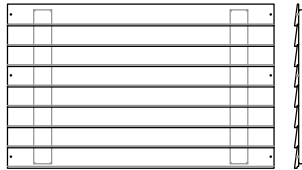


2A030 SMALL ROOF SECTION
(1 REQ.)

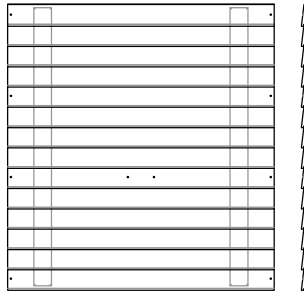




2A031 LARGE ROOF SECTION
(1 REQ.)

LT61 ROOF TRIM
(2 REQ.)



LT62 ROOF TRIM
(2 REQ.)

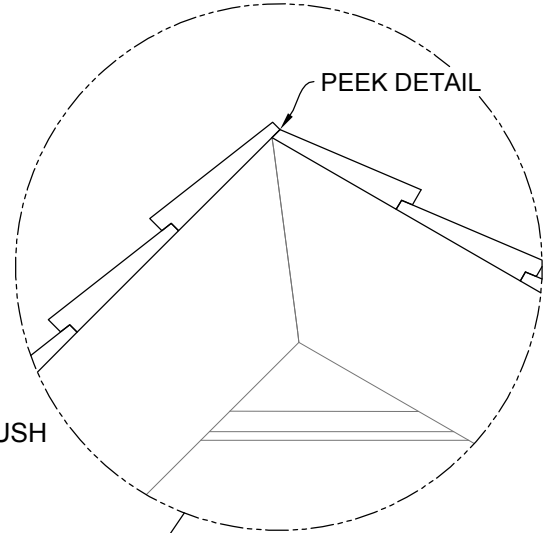









PEEK DETAIL

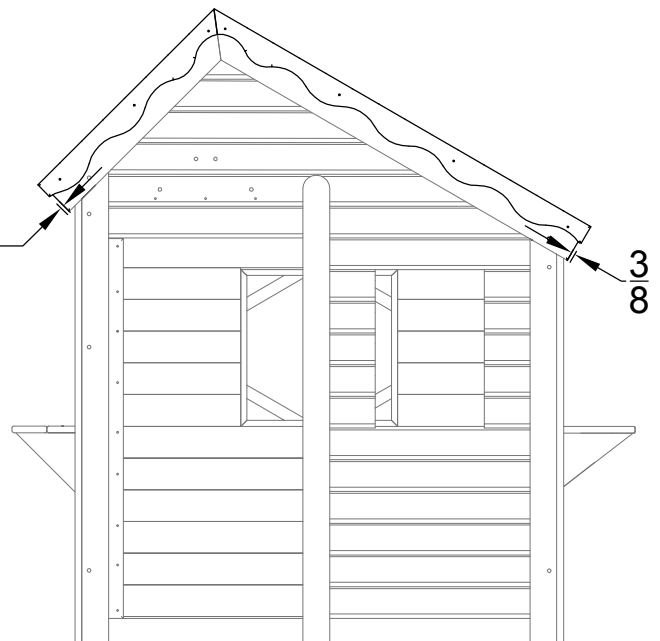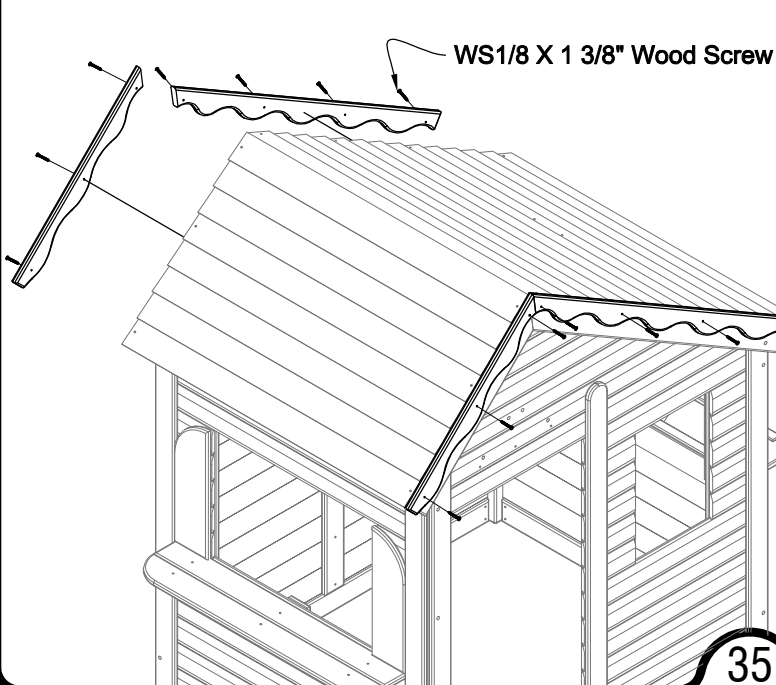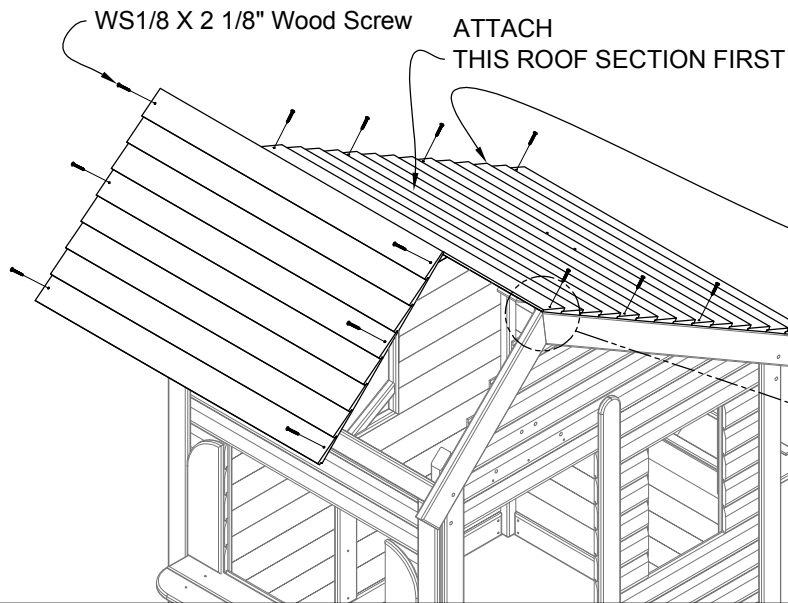

Phase Hardware

  


Phase Parts

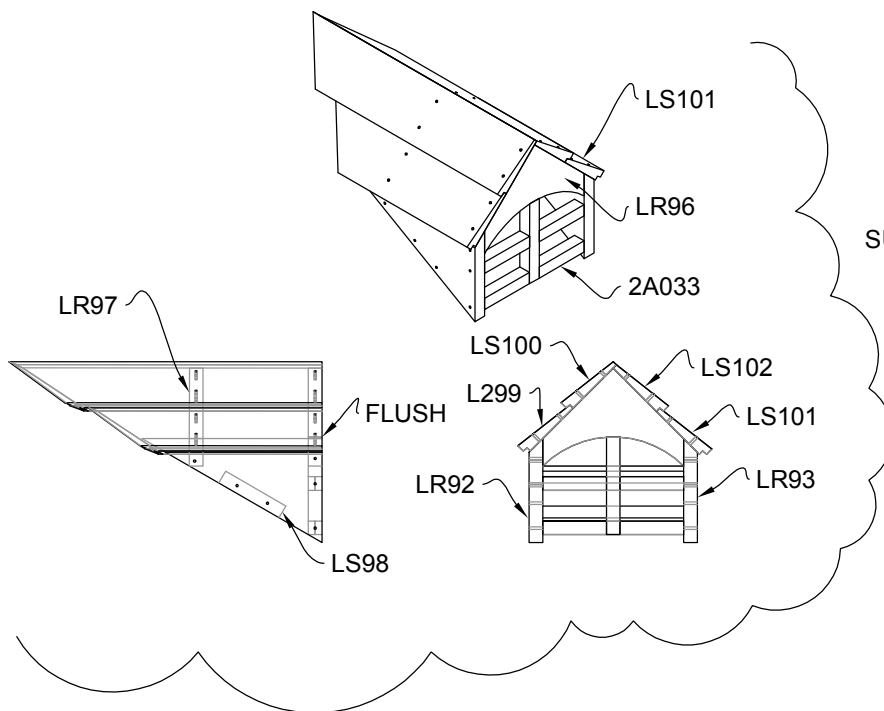       

STEP 1:


(6) WS1/8 X 1 3/8" Wood Screw

SURFACES ARE FLUSH

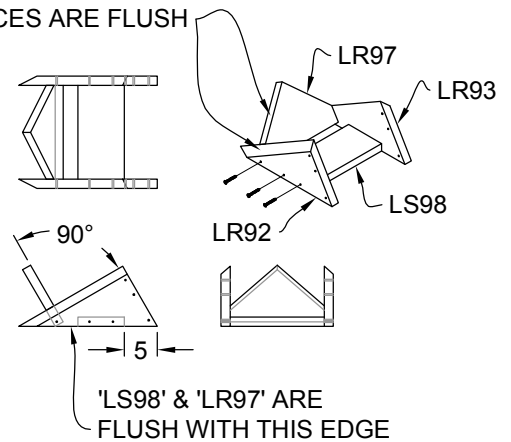

STEP 2:


(6) WS1/8 X 1 3/8" Wood Screw

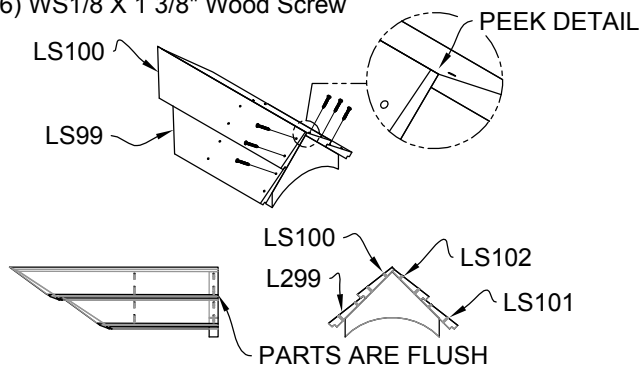

STEP 3:

(14) WS1/8 X 1 3/8" Wood Screw


(2) WS1/8 X 1" Wood Screw

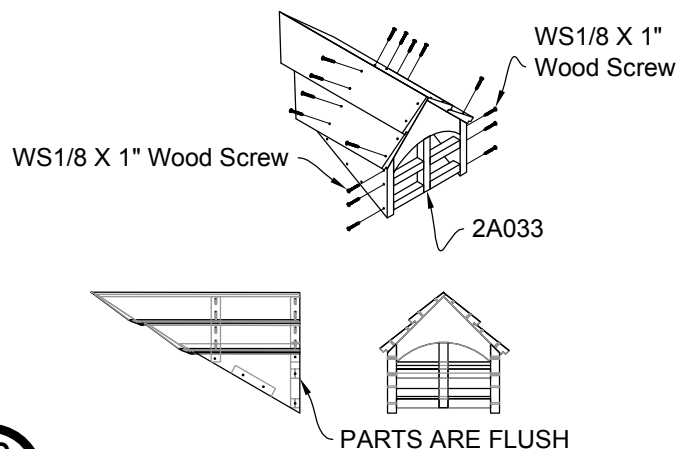




**FLOOR & FENCE
NOT SHOWN FOR CLARITY**


Phase Hardware

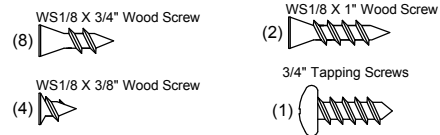


Phase Parts

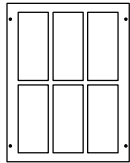

(PW099) WINDOW FRAME
(1 REQ.)

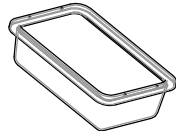


(P-TUB-B) BLUE TUB
(1 REQ.)

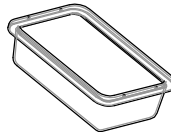

(P-TUB-G) GREEN TUB
(1 REQ.)








(PHN867) PLASTIC PHONE
(1 REQ.)

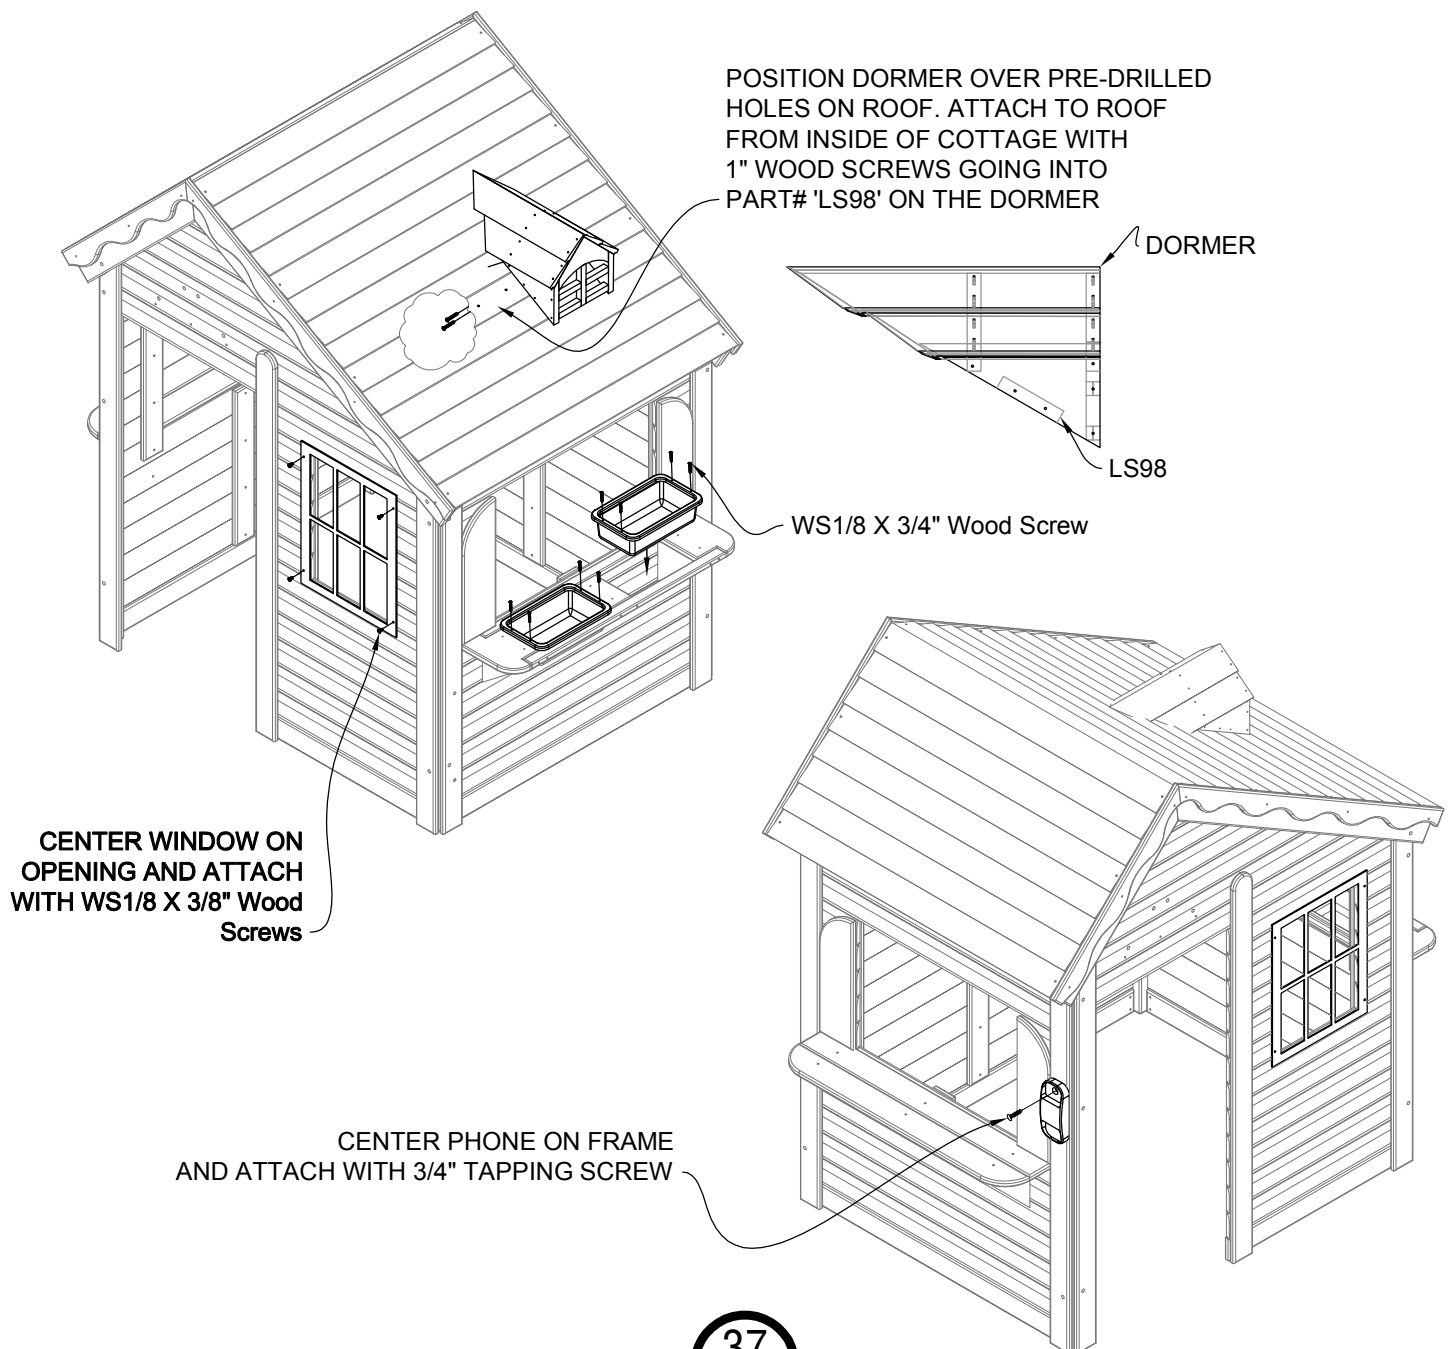




**ROOF & FENCE
NOT SHOWN FOR CLARITY**

     
Phase Hardware




Phase Parts

 


2A024 PORCH ROOF (Lt.)
(1 REQ.)

 

2A025 PORCH ROOF (Rt.)
(1 REQ.)

 


LS52 DOOR STOP
(1 REQ.)

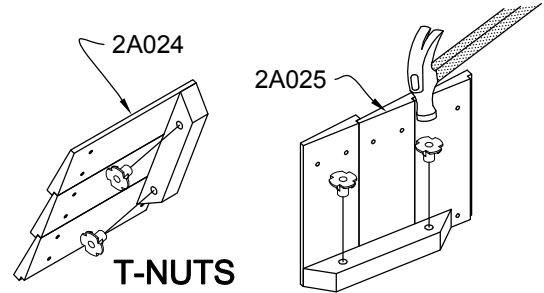

T-NUTS

**STEP 1: INSERT (2) T-NUTS
INTO INSIDE HOLE OF 2A024 & 2A025
MAKE SURE T-NUTS ARE FLUSH TO
SURFACE**


SH2-5/16X2 1/2 Socket Head Bolt
LOCK WASHER & FLAT WASHER
(THROUGH INSIDE OF COTTAGE
AND INTO T-NUTS ON PORCH ROOFS)

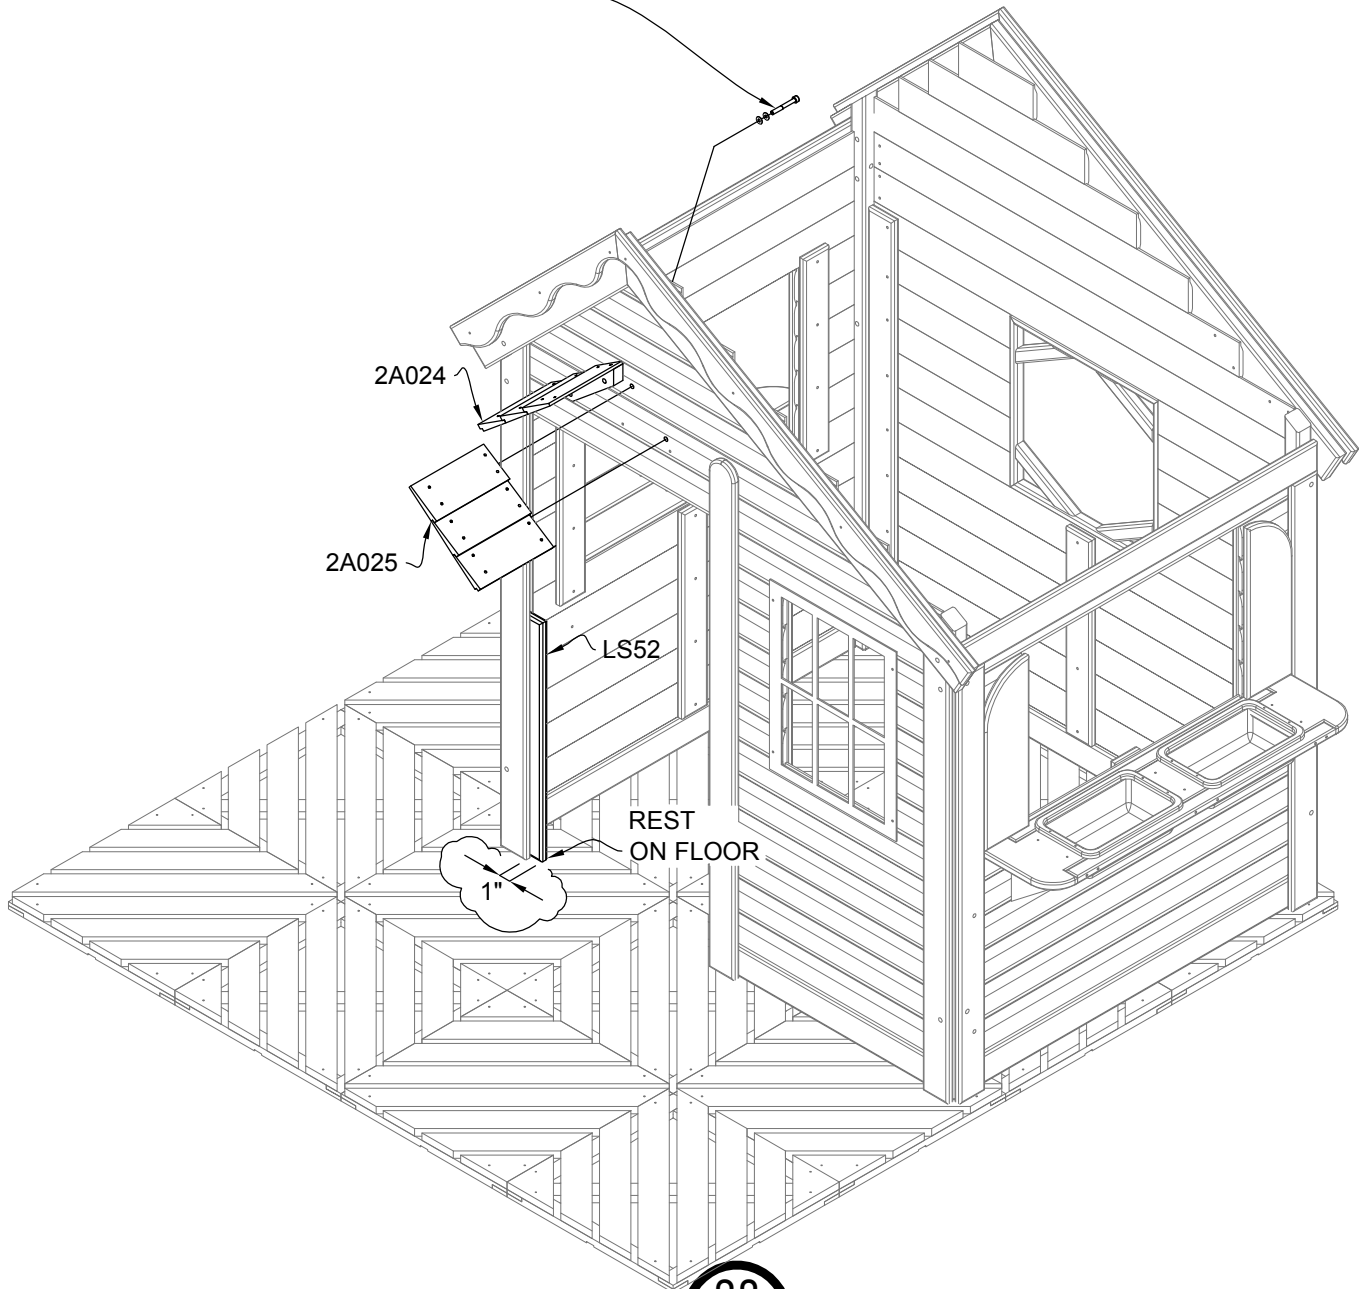


Phase Hardware



 
**ROOF, FLOOR & FENCE
NOT SHOWN FOR CLARITY**




Phase Parts

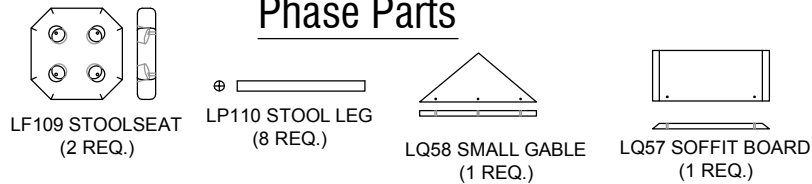


**WS1/8 X 2 1/8" Wood Screw
(THROUGH INSIDE OF COTTAGE
PRE-DRILLED HOLES AND INTO PORCH
ROOF SOFFIT BOARD 'LQ57')**

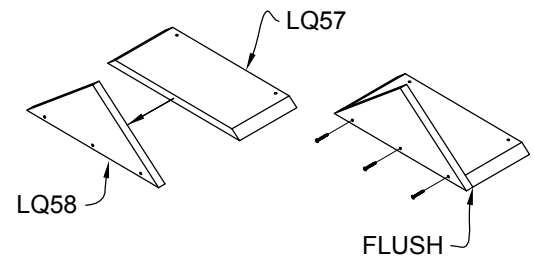

**STEP 1: CENTER 'LQ58' ON 'LQ57'
AS SHOWN AND ATTACH WITH
(3) WS1/8 X 2 1/8" Wood Screw**

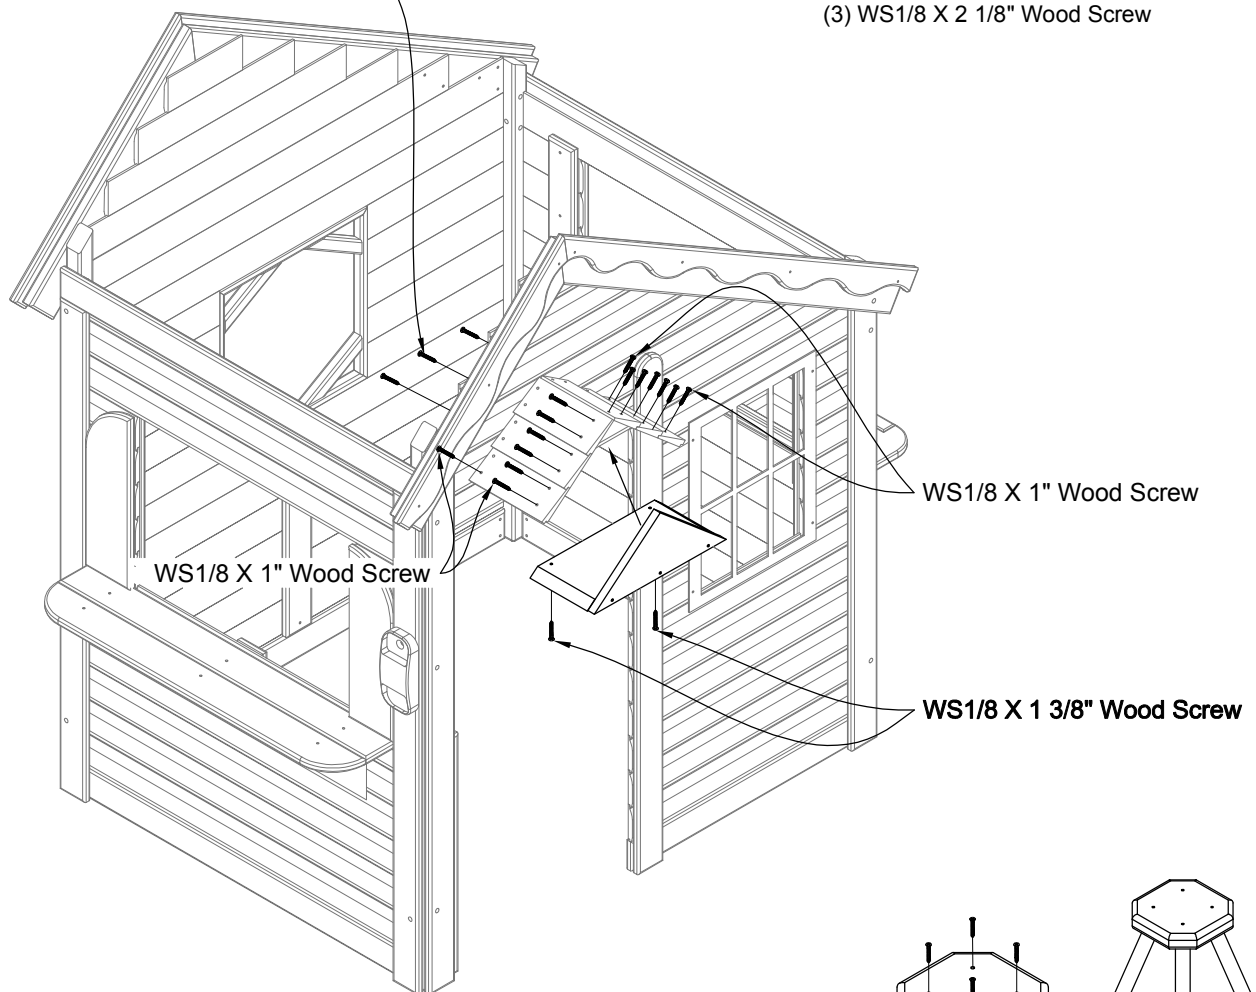

**STOOL ASSEMBLY:
PUSH LEGS TO THE BOTTOM OF THE HOLES
AND ATTACH WITH (4) WS1/8 X 1 3/4" Wood Screw**

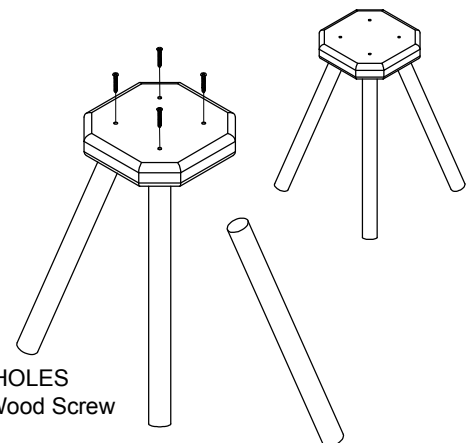


Phase Hardware

WS1/8 X 1 5/8" Wood Screw
(1)

WS#8 X 3/4" Wood Screw
(12)

WS1/8 X 5/8" Wood Screws
(2)

Phase Parts

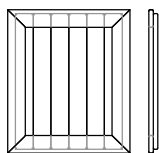

2A023 DOOR
(1 REQ.)





(SH275) DOOR HINGE
(2 REQ.)



PLACARD (1 REQ.)



(DRKNOB) DOOR KNOB
(1 REQ.)

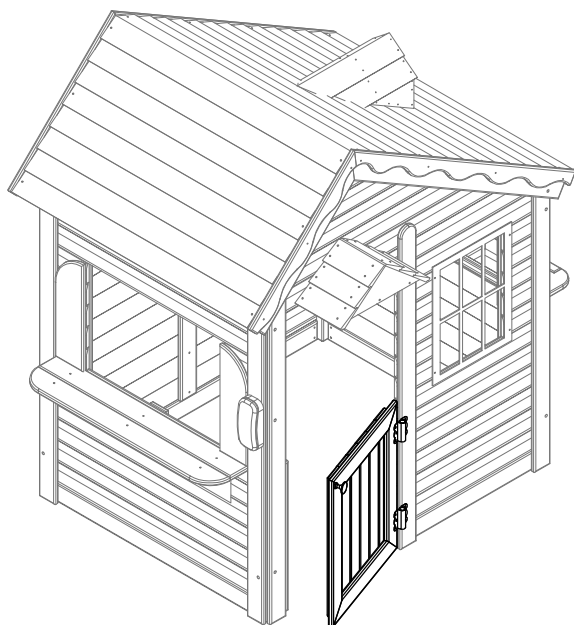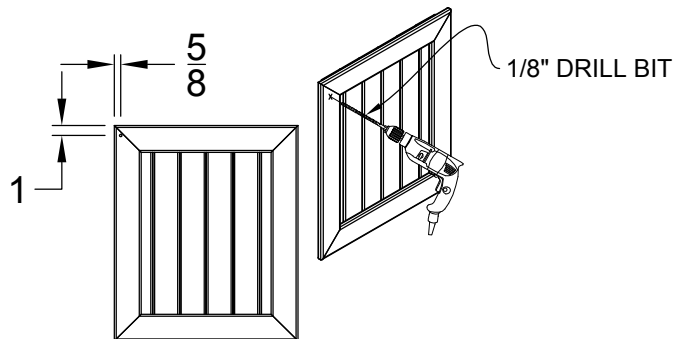


ATTACH PLACARD
WITH (2) W3/16X5/8 SCREWS.
CENTERED ON PORCH GABLE.



DOOR ATTACHMENT:
POSITION DOOR AND HINGES USING DIMENSIONS SHOWN.
ATTACH HINGES WITH (6) WS#8 X 3/4" Wood Screws EACH.

 
Phase Hardware

2 WS1/8 X 1 3/4" Wood Screws



Phase Parts



2 - Plastic Stakes - P004



ASSEMBLY COMPLETE!
MAKE SURE TO TIGHTEN ALL
HARDWARE



NOTE: DO NOT OVER TIGHTEN
HARDWARE.

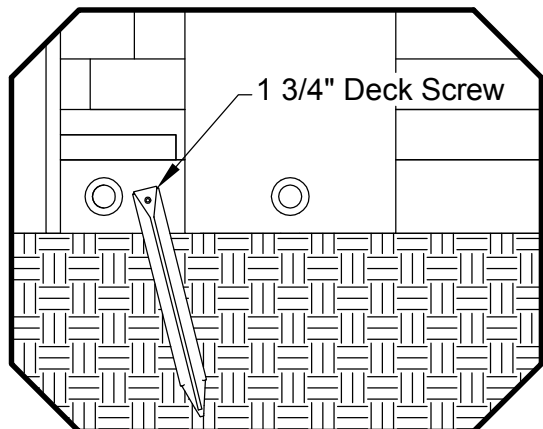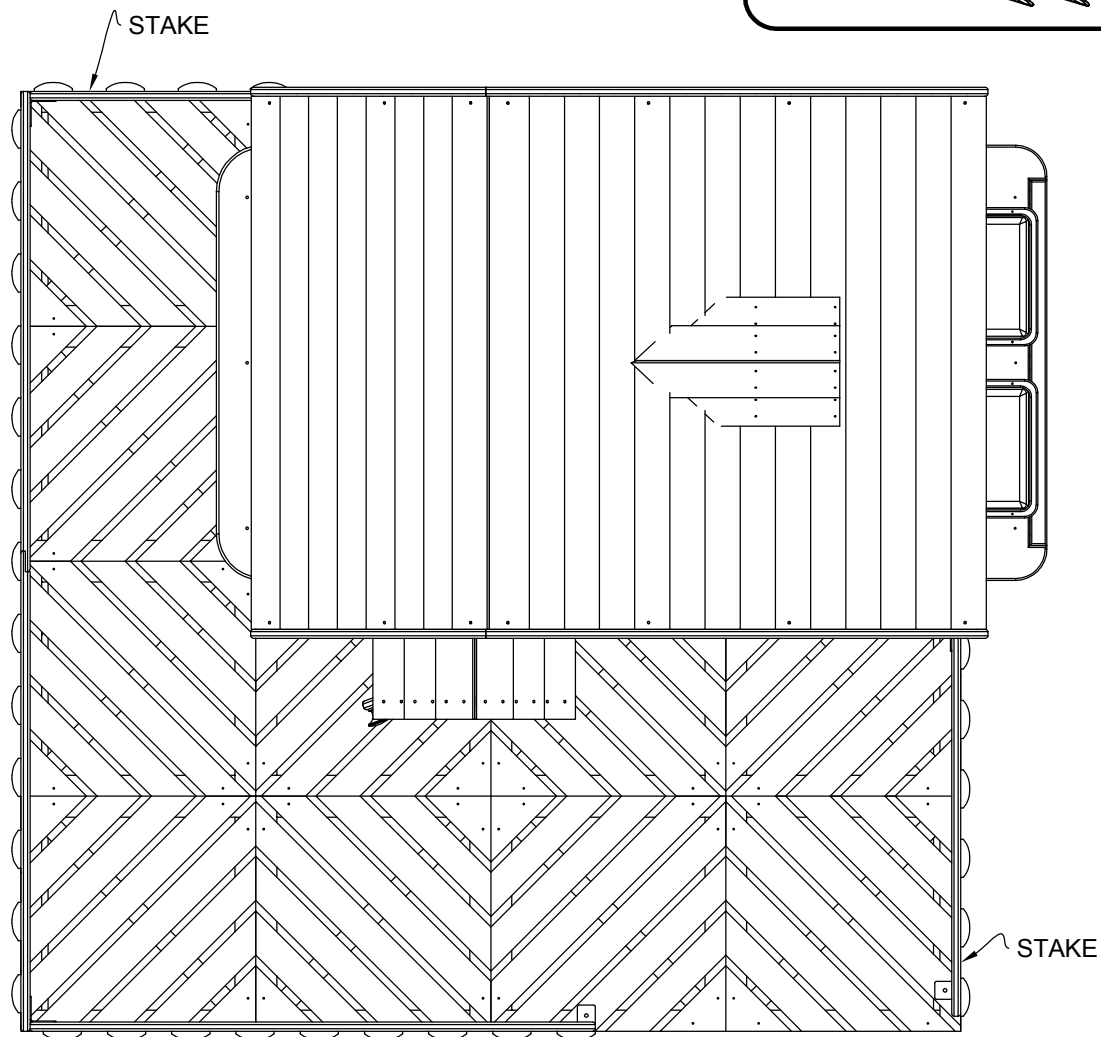

[illegible]

LIMITED WARRANTY

Creative Cedar Design offers many fun, interactive, and safe play sets. We only guarantee the original purchaser that this product is free of defects in materials for 30 days from the date of purchase. The product registration card, along with a copy of the dated purchase receipt, must be returned to Creative Cedar Designs, within 30 days from the date of purchase.

Under this warranty there will be a replacement for the defective component of the play set. All the wood components in the play set are covered by a 5 year prorated warranty against wood rot and termite damage. All other parts are covered by a one year warranty. This guarantee is effective only if the product has been assembled and maintained in accordance with the instructions. This warranty does not cover the cost of labor, expedited freight, and cost of freight after the first 30 of purchase, commercial use, abuse, accident, modification, addition of any accessories not sold by Creative Cedar Design, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and product. (Minor wood checks, cracks, surface cracks, peeling, splinters are all natural characteristics of wood and does not affect the structural integrity and are not covered under warranty.)

Creative Cedar Design reserves the right to obtain photos or physical evidence of the parts that are claimed to be defective before we issue the warranty claim. Any parts returned to our warehouse will be paid for by the customer, unless otherwise documented. We have the necessary machinery/equipment to test and verify that the part is in fact defective.

At both of our warehouse facilities, there are many experienced staff members that will be able to fulfill your claim within 1 to 2 weeks and ensure that your product is free of defects. In addition they will be able to answer any additional questions you may have.

It is our commitment to you that you can trust Creative Cedar Design products you bring into your home. We have carefully designed all of our products with aggressive and consistent testing. We continue to test our products at various phases of the entire production process.

For warranty service or replacement part information, please visit our website at www.creativecedardesigns.com or call 1-888-FNF-GYMS (1888-363-4967) or write to us at: Consumer Service, Creative Cedar Design/Fun N Fit, PO Box 40225, Glen Oaks, New York 11004, U.S.A. Replacement parts are available for purchase after the warranty expires. Please contact us for details.

Warranty: 5 Year Pro Rated for wood components - 1 Year for All Other Parts	
<i>Years from Date of Purchase</i>	<i>Cost to Customer</i>
0-1 (after first 30 days)	0% and S&H
2	20% and S&H
3	40% and S&H
4	60% and S&H
5	80% and S&H
Over 5	100% and S&H

Warranty claim procedure

If you are confident that your playsystem has been installed and maintained properly, and you have a warranty claim, proceed with the following steps:

1. We will need copy of your proof of purchase (Vendor sales receipt only.)
2. We require a brief written description of the warranty issue.
3. Photos of warranted parts and of the entire play system.

If **any** of the above steps are not completed, there may be delays in the completion of your claim, or possibly warranty cancellation.

Mail information to:

Creative Cedar Designs

P.O. Box 40225

Glen Oaks, NY 11004

or email at

custservice@creativecedardesigns.com

Our customer service department will review the claim and make contact with the customer by mail or by phone.

1-888-FNF-GYMS

1-888-363-4967

PRODUCT REGISTRATION CARD

Please complete this Product Registration Card along with a copy of the receipt and return to Creative Cedar Design., within 30 days of original purchase in order to validate time of purchase for warranty.

Name: _____

Address: _____

City, State, Zip Code: _____

Phone: _____

Date of Purchase: _____

Purchased Through: _____

City, State, Zip Code: _____

Playset Name: _____ Playset Model: _____

Overall, how would you rate the quality of our product?

- ☐ Excellent
- ☐ Good
- ☐ Satisfied
- ☐ Poor
- ☐ Unsatisfied

Would you recommend our product to family and friends?

- ☐ Yes
- ☐ No

What age group are your children?

- ☐ 3-4
- ☐ 5-6
- ☐ 7-8
- ☐ 9-10
- ☐ 11-12

How did you hear about us?

- ☐ In Store Display
- ☐ Sales Person
- ☐ Advertisement
- ☐ Internet
- ☐ Family and Friends

Additional Comments: _____

PRODUCT REGISTRATION CARD

Please complete this Product Registration Card along with a copy of the receipt and return to Creative Cedar Design., within 30 days of original purchase in order to validate time of purchase for warranty.

FOLD HERE

Place
Stamp
Here

Creative Cedar Design, Inc.
PO Box 40225
Glen Oaks, New York 11004